



(12) **EUROPEAN PATENT APPLICATION**

(43) Date of publication:
04.08.2021 Bulletin 2021/31

(51) Int Cl.:
B60W 40/10 (2012.01) **F02D 41/26** (2006.01)
G01D 5/245 (2006.01) **G01M 17/007** (2006.01)
G01P 13/04 (2006.01)

(21) Application number: **21154204.8**

(22) Date of filing: **29.01.2021**

(84) Designated Contracting States:
AL AT BE BG CH CY CZ DE DK EE ES FI FR GB GR HR HU IE IS IT LI LT LU LV MC MK MT NL NO PL PT RO RS SE SI SK SM TR
 Designated Extension States:
BA ME
 Designated Validation States:
KH MA MD TN

(71) Applicant: **TOYOTA JIDOSHA KABUSHIKI KAISHA**
Toyota-shi, Aichi-ken, 471-8571 (JP)

(72) Inventors:
 • **SUZUKI, Ikuma**
TOYOTA-SHI, AICHI-KEN, 471-8571 (JP)
 • **OHASHI, Yuta**
TOYOTA-SHI, AICHI-KEN, 471-8571 (JP)

(30) Priority: **31.01.2020 JP 2020015721**


(74) Representative: **Cabinet Beau de Loménie**
158, rue de l'Université
75340 Paris Cedex 07 (FR)

(54) **VEHICLE**

(57) When a vehicle control interface (110) receives information indicating "Standstill" from a VP (120), the vehicle control interface (110) sets a value 2 in a signal indicating an actual moving direction (a signal indicating a moving direction of a vehicle (10)). When the number of wheels rotating in a forward rotation direction is larger than two, the vehicle control interface (110) sets a value 0 in the signal indicating the actual moving direction. When the number of wheels rotating in a reverse rotation

direction is larger than two, the vehicle control interface (110) sets a value 1 in the signal indicating the actual moving direction. When the number of wheels rotating in the forward rotation direction is equal to the number of wheels rotating in the reverse rotation direction, the vehicle control interface (110) sets a value 3 in the signal indicating the actual moving direction. The vehicle control interface (110) provides the signal indicating the actual moving direction to an ADK (200).

FIG.5

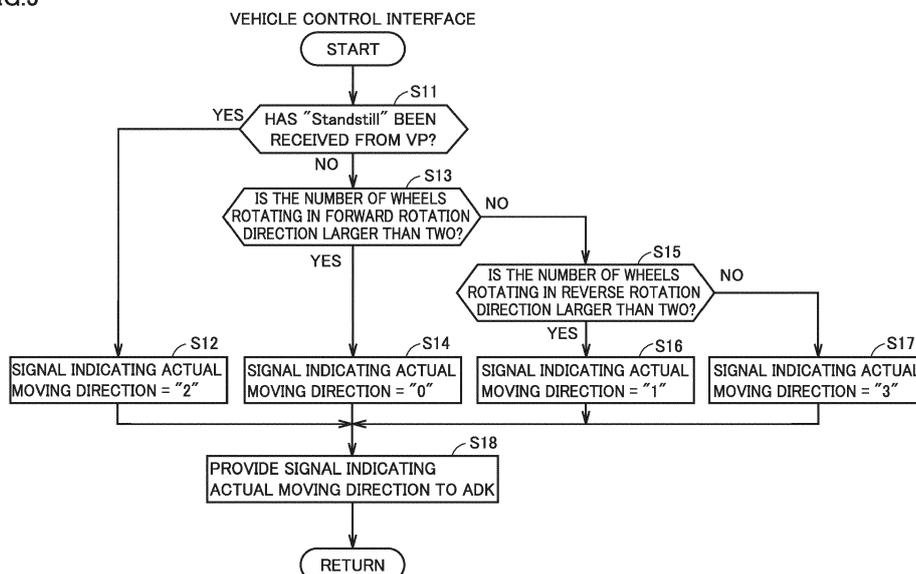

Description

[0001] This nonprovisional application is based on Japanese Patent Application No. 2020-015721 filed with the Japan Patent Office on January 31, 2020, the entire contents of which are hereby incorporated by reference and to which the person of the art can refer to when considering the present disclosure.

BACKGROUND

Field

[0002] The present disclosure relates to a vehicle capable of autonomous driving.

Description of the Background Art

[0003] A technique relating to autonomous driving of a vehicle has recently been developed. For example, Japanese Patent Laying-Open No. 2018-132015 discloses a vehicle including a motive power system that manages motive power of the vehicle in a centralized manner, a power supply system that manages supply of electric power to various vehicle-mounted devices in a centralized manner, and an autonomous driving system that carries out autonomous driving control of the vehicle in a centralized manner.

SUMMARY

[0004] The autonomous driving system may externally be attached to a vehicle main body. In this case, autonomous driving is carried out as the vehicle is controlled in accordance with an instruction from the autonomous driving system. In order to enhance accuracy in autonomous driving, a state of the vehicle is desirably appropriately provided (conveyed) to the autonomous driving system. A moving direction of the vehicle represents one of states of the vehicle.

[0005] The present disclosure was made to achieve the object above, and an object of the present disclosure is to appropriately provide, in a vehicle capable of autonomous driving, a signal indicating a moving direction of the vehicle from a vehicle main body to an autonomous driving system.

(1) A vehicle according to the present disclosure is a vehicle on which an autonomous driving system is mountable, and the vehicle includes a vehicle platform that controls the vehicle in accordance with an instruction from the autonomous driving system and a vehicle control interface that interfaces between the vehicle platform and the autonomous driving system. The vehicle control interface provides to the autonomous driving system, a signal indicating a moving direction of the vehicle that is determined in accordance with a rotation direction largest in number among rotation directions of wheels.

According to the configuration, the vehicle is provided with the vehicle control interface that interfaces between the vehicle platform and the autonomous driving system. A signal indicating the determined moving direction of the vehicle can thus appropriately be provided to the autonomous driving system through the vehicle control interface. The moving direction of the vehicle is determined based on majority rule based on the rotation direction of the wheels.

(2) In one embodiment, when a certain time period has elapsed with a speed of all wheels being zero, the vehicle control interface provides to the autonomous driving system, a signal indicating "Standstill" as the signal indicating the moving direction of the vehicle.

According to the configuration, when a certain time period has elapsed with the speed of all wheels being zero, an appropriate signal indicating stop (the signal indicating "Standstill") can be provided to the autonomous driving system.

(3) In one embodiment, when the number of wheels rotating in a forward rotation direction is larger than the number of wheels rotating in a reverse rotation direction, the vehicle control interface provides a signal indicating "Forward" to the autonomous driving system, and when the number of wheels rotating in the reverse rotation direction is larger than the number of wheels rotating in the forward rotation direction, the vehicle control interface provides a signal indicating "Reverse" to the autonomous driving system.

According to the configuration, when the number of wheels rotating in the forward rotation direction is larger than the number of wheels rotating in the reverse rotation direction, an appropriate signal indicating forward travel (the signal indicating "Forward") can be provided to the autonomous driving system. When the number of wheels rotating in the reverse rotation direction is larger than the number of wheels rotating in the forward rotation direction, an appropriate signal indicating reverse travel (the signal indicating "Reverse") can be provided to the autonomous driving system.

(4) In one embodiment, when the number of wheels rotating in a forward rotation direction is equal to the number

of wheels rotating in a reverse rotation direction, the vehicle control interface provides a signal indicating "Undefined" to the autonomous driving system.

5 **[0006]** According to the configuration, when the moving direction of the vehicle cannot be determined based on majority rule based on the rotation directions of the wheels, a signal to that effect (the signal indicating "Undefined") can be provided to the autonomous driving system.

[0007] The foregoing and other objects, features, aspects and advantages of the present disclosure will become more apparent from the following detailed description of the present disclosure when taken in conjunction with the accompanying drawings.

10 BRIEF DESCRIPTION OF THE DRAWINGS

[0008]

15 Fig. 1 is a diagram showing overview of a MaaS system in which a vehicle according to an embodiment of the present disclosure is used.

Fig. 2 is a diagram showing a detailed configuration of a vehicle control interface, a VP, and an ADK.

Fig. 3 is a diagram for illustrating setting of a signal indicating an actual moving direction.

Fig. 4 is a flowchart showing a procedure of processing performed in the VP.

20 Fig. 5 is a flowchart showing a procedure of processing for determining a moving direction of the vehicle.

Fig. 6 is a diagram of an overall configuration of MaaS.

Fig. 7 is a diagram of a system configuration of a MaaS vehicle.

Fig. 8 is a diagram showing a typical flow in an autonomous driving system.

Fig. 9 is a diagram showing an exemplary timing chart of an API relating to stop and start of the MaaS vehicle.

25 Fig. 10 is a diagram showing an exemplary timing chart of the API relating to shift change of the MaaS vehicle.

Fig. 11 is a diagram showing an exemplary timing chart of the API relating to wheel lock of the MaaS vehicle.

Fig. 12 is a diagram showing a limit value of variation in tire turning angle.

Fig. 13 is a diagram illustrating intervention by an accelerator pedal.

Fig. 14 is a diagram illustrating intervention by a brake pedal.

30 Fig. 15 is a diagram of an overall configuration of MaaS.

Fig. 16 is a diagram of a system configuration of a vehicle.

Fig. 17 is a diagram showing a configuration of supply of power of the vehicle.

Fig. 18 is a diagram illustrating strategies until the vehicle is safely brought to a standstill at the time of occurrence of a failure.

35 Fig. 19 is a diagram showing arrangement of representative functions of the vehicle.

DESCRIPTION OF THE PREFERRED EMBODIMENTS

40 **[0009]** An embodiment of the present disclosure will be described below in detail with reference to the drawings. The same or corresponding elements in the drawings have the same reference characters allotted and description thereof will not be repeated.

<Overall Configuration>

45 **[0010]** Fig. 1 is a diagram showing overview of a mobility as a service (MaaS) system in which a vehicle according to an embodiment of the present disclosure is used.

[0011] Referring to Fig. 1, this MaaS system includes a vehicle 10, a data server 500, a mobility service platform (which is also referred to as "MSPF" below) 600, and autonomous driving related mobility services 700.

50 **[0012]** Vehicle 10 includes a vehicle main body 100 and an autonomous driving kit (which is also referred to as "ADK" below) 200. Vehicle main body 100 includes a vehicle control interface 110, a vehicle platform (which is also referred to as "VP" below) 120, and a data communication module (DCM) 190.

[0013] Vehicle 10 can carry out autonomous driving in accordance with commands from ADK 200 attached to vehicle main body 100. Though Fig. 1 shows vehicle main body 100 and ADK 200 at positions distant from each other, ADK 200 is actually attached to a rooftop or the like of vehicle main body 100. ADK 200 can also be removed from vehicle main body 100. While ADK 200 is not attached, vehicle main body 100 can travel by manual driving by a user. In this case, VP 120 carries out travel control (travel control in accordance with an operation by a user) in a manual mode.

55 **[0014]** Vehicle control interface 110 can communicate with ADK 200 over a controller area network (CAN) or Ethernet®. Vehicle control interface 110 receives various commands from ADK 200 by executing a prescribed application program

interface (API) defined for each communicated signal. Vehicle control interface 110 provides a state of vehicle main body 100 to ADK 200 by executing a prescribed API defined for each communicated signal.

[0015] When vehicle control interface 110 receives a command from ADK 200, it outputs a control command corresponding to the command to VP 120. Vehicle control interface 110 obtains various types of information on vehicle main body 100 from VP 120 and outputs the state of vehicle main body 100 to ADK 200. A configuration of vehicle control interface 110 will be described in detail later.

[0016] VP 120 includes various systems and various sensors for controlling vehicle main body 100. VP 120 carries out various types of vehicle control in accordance with a command given from ADK 200 through vehicle control interface 110. Namely, as VP 120 carries out various types of vehicle control in accordance with a command from ADK 200, autonomous driving of vehicle 10 is carried out. A configuration of VP 120 will also be described in detail later.

[0017] ADK 200 includes an autonomous driving system (which is also referred to as "ADS" below) for autonomous driving of vehicle 10. ADK 200 creates, for example, a driving plan of vehicle 10 and outputs various commands for traveling vehicle 10 in accordance with the created driving plan to vehicle control interface 110 in accordance with the API defined for each command. ADK 200 receives various signals indicating states of vehicle main body 100 from vehicle control interface 110 in accordance with the API defined for each signal and has the received vehicle state reflected on creation of the driving plan. A configuration of ADK 200 (ADS) will also be described later.

[0018] DCM 190 includes a communication interface for vehicle main body 100 to wirelessly communicate with data server 500. DCM 190 outputs various types of vehicle information such as a speed, a position, or an autonomous driving state to data server 500. DCM 190 receives from autonomous driving related mobility services 700 through MSPF 600 and data server 500, for example, various types of data for management of travel of an autonomous driving vehicle including vehicle 10 by mobility services 700.

[0019] MSPF 600 is an integrated platform to which various mobility services are connected. In addition to autonomous driving related mobility services 700, not-shown various mobility services (for example, various mobility services provided by a ride-share company, a car-sharing company, an insurance company, a rent-a-car company, and a taxi company) are connected to MSPF 600. Various mobility services including mobility services 700 can use various functions provided by MSPF 600 by using APIs published on MSPF 600, depending on service contents.

[0020] Autonomous driving related mobility services 700 provide mobility services using an autonomous driving vehicle including vehicle 10. Mobility services 700 can obtain, for example, operation control data of vehicle 10 that communicates with data server 500 and/or information stored in data server 500 from MSPF 600, by using the APIs published on MSPF 600. Mobility services 700 transmit, for example, data for managing an autonomous driving vehicle including vehicle 10 to MSPF 600, by using the API.

[0021] MSPF 600 publishes APIs for using various types of data on vehicle states and vehicle control necessary for development of the ADS. An ADS provider can use as the APIs, the data on the vehicle states and vehicle control necessary for development of the ADS stored in data server 500.

<Configuration of Vehicle>

[0022] Fig. 2 is a diagram showing a detailed configuration of vehicle control interface 110, VP 120, and ADK 200. Referring to Fig. 2, ADK 200 includes a compute assembly 210, a human machine interface (HMI) 230, sensors for perception 260, sensors for pose 270, and a sensor cleaning 290.

[0023] During autonomous driving of vehicle 10, compute assembly 210 obtains information on an environment around the vehicle and a pose, a behavior, and a position of vehicle 10 with various sensors which will be described later. Compute assembly 210 obtains a state of vehicle 10 from VP 120 through vehicle control interface 110 and sets a next operation (acceleration, deceleration, or turning) of vehicle 10. Compute assembly 210 outputs various instructions for realizing a set next operation of vehicle 10 to vehicle control interface 110.

[0024] HMI 230 accepts an input operation from a user for vehicle 10. HMI 230 can accept, for example, an input by a touch operation onto a display screen and/or an audio input. HMI 230 presents information to a user of vehicle 10 by showing information on the display screen. HMI 230 may present information to the user of vehicle 10 by voice and sound in addition to or instead of representation of information on the display screen. HMI 230 provides information to the user and accepts an input operation, for example, during autonomous driving, during manual driving by a user, or at the time of transition between autonomous driving and manual driving.

[0025] Sensors for perception 260 include sensors that perceive an environment around the vehicle, and are implemented, for example, by at least any of laser imaging detection and ranging (LIDAR), a millimeter-wave radar, and a camera.

[0026] The LIDAR measures a distance based on a time period from emission of pulsed laser beams (infrared rays) until return of the emitted beams reflected by an object. The millimeter-wave radar measures a distance and/or a direction to an object by emitting radio waves short in wavelength to the object and detecting radio waves that are reflected and return from the object. The camera is arranged, for example, on a rear side of a room mirror in a compartment and

shoots the front of vehicle 10. As a result of image processing onto images shot by the camera, another vehicle, an obstacle, or a human in front of vehicle 10 can be recognized. Information obtained by sensors for perception 260 is output to compute assembly 210.

[0027] Sensors for pose 270 detect a pose, a behavior, or a position of vehicle 10. Sensors for pose 270 include, for example, an inertial measurement unit (IMU) and a global positioning system (GPS).

[0028] The IMU detects, for example, an acceleration in a front-rear direction, a lateral direction, and a vertical direction of vehicle 10 and an angular velocity in a roll direction, a pitch direction, and a yaw direction of vehicle 10. The GPS detects a position of vehicle 10 based on information received from a plurality of GPS satellites that orbit the Earth. Information obtained by sensors for pose 270 is output to compute assembly 210.

[0029] Sensor cleaning 290 can remove soiling attached to various sensors. Sensor cleaning 290 removes soiling on a lens of the camera or a portion from which laser beams and/or radio waves are emitted, for example, with a cleaning solution and/or a wiper.

[0030] Vehicle control interface 110 includes a vehicle control interface box (VCIB) 111A and a VCIB 111B. Each of VCIBs 111A and 111B includes an electronic control unit (ECU), and specifically contains a central processing unit (CPU) and a memory (a read only memory (ROM) and a random access memory (RAM)) (neither of which is shown). VCIB 111A and VCIB 111B are basically equivalent in function to each other. VCIB 111A and VCIB 111B are partially different from each other in a plurality of systems connected thereto that make up VP 120.

[0031] Each of VCIBs 111A and 111B is communicatively connected to compute assembly 210 of ADK 200 over the CAN or the like. VCIB 111A and VCIB 111B are communicatively connected to each other.

[0032] Each of VCIBs 111A and 111B relays various instructions from ADK 200 and provides them as control commands to VP 120. More specifically, each of VCIBs 111A and 111B executes a program stored in a memory, converts various instructions provided from ADK 200 into control commands to be used for control of each system of VP 120, and provides the converted control commands to a destination system. Each of VCIBs 111A and 111B processes or relays various types of vehicle information output from VP 120 and provides the vehicle information as a vehicle state to ADK 200.

[0033] For at least one of systems of VP 120 such as a brake system and a steering system, VCIBs 111A and 111B are configured to be equivalent in function to each other so that control systems between ADK 200 and VP 120 are redundant. Therefore, when some kind of failure occurs in a part of the system, the function (turning or stopping) of VP 120 can be maintained by switching between the control systems as appropriate or disconnecting a control system where failure has occurred.

[0034] VP 120 includes brake systems 121A and 121B, steering systems 122A and 122B, an electric parking brake (EPB) system 123A, a P-Lock system 123B, a propulsion system 124, a pre-crash safety (PCS) system 125, and a body system 126.

[0035] Brake system 121B, steering system 122A, EPB system 123A, P-Lock system 123B, propulsion system 124, and body system 126 of the plurality of systems of VP 120 are communicatively connected to VCIB 111A through a communication bus.

[0036] Brake system 121A, steering system 122B, and P-Lock system 123B of the plurality of systems of VP 120 are communicatively connected to VCIB 111B through a communication bus.

[0037] Brake systems 121A and 121B can control a plurality of braking apparatuses (not shown) provided in wheels of vehicle 10. The braking apparatus includes, for example, a disc brake system that is operated with a hydraulic pressure regulated by an actuator. Brake system 121A and brake system 121B may be equivalent in function to each other. Alternatively, any one of brake systems 121A and 121B may be able to independently control braking force of each wheel and the other thereof may be able to control braking force such that equal braking force is generated in the wheels.

[0038] A wheel speed sensor 127 is connected to brake system 121B. Wheel speed sensor 127 is provided in each wheel of vehicle 10. Wheel speed sensor 127 detects a rotation speed and a rotation direction of a wheel. Wheel speed sensor 127 outputs the detected rotation speed and rotation direction of the wheel to brake system 121B. For example, wheel speed sensor 127 provides pulses different between during rotation in a direction of forward travel of vehicle 10 and during rotation in a direction of reverse travel of vehicle 10. Brake system 121B fixes or confirms the rotation direction of each wheel based on the pulses from wheel speed sensor 127. Then, brake system 121B provides information indicating the fixed rotation direction of each wheel to VCIB 111A.

[0039] Brake system 121B determines whether or not vehicle 10 has come to a standstill based on the fixed rotation direction of each wheel. Specifically, when the speed of all wheels is set to zero and when all (for example, four) wheel speed values are zero during a certain time period since the speed of all wheels was set to zero, brake system 121B determines that vehicle 10 has come to a standstill. When brake system 121B determines that vehicle 10 has come to a standstill, the brake system provides information indicating "Standstill" to VCIB 111A.

[0040] Each of brake systems 121A and 121B receives a command from ADK 200 as a control command through vehicle control interface 110 and generates a braking instruction to the braking apparatus in accordance with the control command. For example, brake systems 121A and 121B control the braking apparatus based on a braking instruction generated in one of brake systems 121A and 121B, and when a failure occurs in one of the brake systems, the braking

apparatus is controlled based on a braking instruction generated in the other brake system.

[0041] Steering systems 122A and 122B can control a steering angle of a steering wheel of vehicle 10 with a steering apparatus (not shown). The steering apparatus includes, for example, rack-and-pinion electric power steering (EPS) that allows adjustment of a steering angle by an actuator.

[0042] Steering systems 122A and 122B are equivalent in function to each other. Each of steering systems 122A and 122B receives a command from ADK 200 as a control command through vehicle control interface 110 and generates a steering instruction to the steering apparatus in accordance with the control command. For example, steering systems 122A and 122B control the steering apparatus based on the steering instruction generated in one of steering systems 122A and 122B, and when a failure occurs in one of the steering systems, the steering apparatus is controlled based on a steering instruction generated in the other steering system.

[0043] A pinion angle sensor 128A is connected to steering system 122A. A pinion angle sensor 128B is connected to steering system 122B. Each of pinion angle sensors 128A and 128B detects an angle of rotation (a pinion angle) of a pinion gear coupled to a rotation shaft of the actuator. Pinion angle sensors 128A and 128B output detected pinion angles to steering systems 122A and 122B, respectively.

[0044] EPB system 123A can control an EPB (not shown) provided in at least any of wheels. The EPB is provided separately from the braking apparatus, and fixes a wheel by an operation of an actuator. The EPB, for example, activates a drum brake for a parking brake provided in at least one of wheels of vehicle 10 to fix the wheel. The EPB activates a braking apparatus to fix a wheel, for example, with an actuator capable of regulating a hydraulic pressure to be supplied to the braking apparatus separately from brake systems 121A and 121B. EPB system 123A receives a command from ADK 200 as a control command through vehicle control interface 110 and controls the EPB in accordance with the control command.

[0045] P-Lock system 123B can control a P-Lock apparatus (not shown) provided in a transmission of vehicle 10. The P-Lock apparatus fixes rotation of an output shaft of the transmission by fitting a protrusion provided at a tip end of a parking lock pawl into a tooth of a gear (locking gear) provided as being coupled to a rotational element in the transmission. A position of the parking lock pawl is adjusted by an actuator. P-Lock system 123B receives a command from ADK 200 as a control command through vehicle control interface 110 and controls the P-Lock apparatus in accordance with the control command.

[0046] Propulsion system 124 can switch a shift range with the use of a shift apparatus (not shown) and can control driving force of vehicle 10 in a direction of travel that is generated from a drive source (not shown). The shift apparatus can select any of a plurality of shift ranges. The drive source includes, for example, a motor generator and/or an engine. Propulsion system 124 receives a command from ADK 200 as a control command through vehicle control interface 110 and controls the shift apparatus and the drive source in accordance with the control command.

[0047] PCS system 125 is communicatively connected to brake system 121B. PCS system 125 carries out control to avoid collision of vehicle 10 or to mitigate damage by using a result of detection by a camera/radar 129. For example, PCS system 125 detects an object in front and determines whether or not vehicle 10 may collide with the object based on a distance to the object. When PCS system 125 determines that there is possibility of collision with the object, it outputs a braking instruction to brake system 121B so as to increase braking force.

[0048] Body system 126 controls, for example, various devices in accordance with a state or an environment of travel of vehicle 10. The various devices include, for example, a direction indicator, a headlight, a hazard light, a horn, a front wiper, and a rear wiper. Body system 126 receives a command from ADK 200 as a control command through vehicle control interface 110 and controls the various devices in accordance with the control command.

[0049] An operation apparatus that can manually be operated by a user for the braking apparatus, the steering apparatus, the EPB, P-Lock, the shift apparatus, various devices, and the drive source described above may separately be provided.

<Determination of Moving Direction of Vehicle>

[0050] In order for ADK 200 to create an appropriate driving plan in autonomous driving, a state of vehicle main body 100 is desirably appropriately obtained. The moving direction of vehicle 10 represents one of important parameters that indicate a state of vehicle main body 100. By obtaining the moving direction of vehicle 10, ADK 200 can recognize, for example, a traveling state of vehicle 10. In the present embodiment, vehicle control interface 110 determines the moving direction of vehicle 10 based on various types of information from VP 120. Then, vehicle control interface 110 provides a signal indicating the moving direction of vehicle 10 (a signal indicating an actual moving direction (Actual_Moving_Direction)) to ADK 200. The moving direction of vehicle 10 can thus appropriately be conveyed to ADK 200. An approach to determination of the moving direction of vehicle 10 will specifically be described below. Though an example in which vehicle 10 includes four wheels is described below, the present disclosure can be applied similarly also to a vehicle including at most three wheels or a vehicle including at least five wheels.

[0051] VP 120 (brake system 121B in the present embodiment) fixes the rotation direction of each wheel (a front left

wheel, a front right wheel, a rear left wheel, and a rear right wheel) based on an output from wheel speed sensor 127. Then, VP 120 provides information (WheelSpeed_Rotation) indicating the fixed rotation direction of each wheel to vehicle control interface 110. The information indicating the rotation direction of the wheel provided from VP 120 to vehicle control interface 110 includes information indicating the rotation direction (forward rotation) in which vehicle 10 travels forward or the rotation direction (reverse rotation) in which vehicle 10 travels rearward.

[0052] As described above, VP 120 determines whether or not vehicle 10 has come to a standstill based on the output from wheel speed sensor 127. Specifically, when the speed of all of four wheels has been set to zero and when all (for example, four) wheel speed values are zero during a certain time period since the speed of all of the four wheels was set to zero, VP 120 determines that vehicle 10 has come to a standstill. When VP 120 determines that vehicle 10 has come to a standstill, VP 120 provides information indicating "Standstill" that indicates stop of vehicle 10 to vehicle control interface 110. The certain time period may be set, for example, to 500 ms. The certain time period is not limited to the above and can be set as appropriate depending on specifications of vehicle 10.

[0053] Vehicle control interface 110 determines the moving direction of vehicle 10 based on various types of information received from VP 120. Then, vehicle control interface 110 provides a signal indicating the determined moving direction (the signal indicating the actual moving direction) of vehicle 10 to ADK 200.

[0054] When vehicle control interface 110 obtains information indicating "Standstill" from VP 120, it determines the moving direction of vehicle 10 as "Standstill".

[0055] When vehicle control interface 110 has not obtained information indicating "Standstill" from VP 120, it determines the moving direction of vehicle 10 based on majority rule based on information indicating the rotation direction of the wheel. Specifically, when the number of wheels rotating in the forward rotation direction is larger than the number of wheels rotating in the reverse rotation direction, vehicle control interface 110 determines the moving direction of vehicle 10 as "Forward". When the number of wheels rotating in the reverse rotation direction is larger than the number of wheels rotating in the forward rotation direction, vehicle control interface 110 determines the moving direction of vehicle 10 as "Reverse". When the number of wheels rotating in the forward rotation direction is equal to the number of wheels rotating in the reverse rotation direction, vehicle control interface 110 determines the moving direction of vehicle 10 as "Undefined". In the present embodiment, when the number of wheels rotating in the forward rotation direction is larger than two, vehicle control interface 110 determines the moving direction of vehicle 10 as "Forward". When the number of wheels rotating in the reverse rotation direction is larger than two, vehicle control interface 110 determines the moving direction of vehicle 10 as "Reverse". When the number of wheels rotating in the forward rotation direction is two and the number of wheels rotating in the reverse rotation direction is two, vehicle control interface 110 determines the moving direction of vehicle 10 as "Undefined". For example, a case that driving wheels slip when the vehicle slips down on a slope or a snow-covered road is assumed as the example where the number of wheels rotating in the forward rotation direction is equal to the number of wheels rotating in the reverse rotation direction.

[0056] Fig. 3 is a diagram for illustrating setting of a signal indicating an actual moving direction. Fig. 3 shows relation between an actual moving direction (the moving direction of vehicle 10) and a value. Specifically, a value is shown in a field "value" and a rotation direction of a wheel is shown in a field "Description". A field "remarks" is used when there are remarks.

[0057] Referring to Fig. 3, a value 0 represents forward travel (Forward). A value 1 represents a reverse travel (Reverse). A value 2 represents stop (Standstill). A value 3 represents undefined (Undefined).

[0058] When vehicle control interface 110 determines the moving direction of vehicle 10 as "Forward", it sets the value 0 in the signal indicating the actual moving direction. When vehicle control interface 110 determines the moving direction of vehicle 10 as "Reverse", it sets the value 1 in the signal indicating the actual moving direction. When vehicle control interface 110 determines the moving direction of vehicle 10 as "Standstill", it sets the value 2 in the signal indicating the actual moving direction. When vehicle control interface 110 determines the moving direction of vehicle 10 as "Undefined", it sets the value 3 in the signal indicating the actual moving direction.

[0059] When vehicle control interface 110 sets the signal indicating the actual moving direction, it provides the set signal indicating the actual moving direction to ADK 200. ADK 200 that has received the signal indicating the actual moving direction set as above can recognize the moving direction of vehicle 10 based on the value indicated in the signal.

<Procedure of Processing Performed in VP>

[0060] Fig. 4 is a flowchart showing a procedure of processing performed in VP 120. Processing in the flowchart in Fig. 4 is repeatedly performed every prescribed control cycle in VP 120. Though an example in which processing in the flowchart in Fig. 4 is performed by software processing by VP 120 is described, a part or the entirety thereof may be implemented by hardware (electric circuitry) made in VP 120.

[0061] VP 120 determines whether or not the speed of all wheels, that is, four wheels, included in vehicle 10 is 0 (a step 1, the step being abbreviated as "S" below). When the speed of all of the four wheels is not zero (NO in S1), VP 120 skips processing thereafter and the process returns.

EP 3 858 700 A1

[0062] When the speed of all of the four wheels is zero (YES in S1), VP 120 determines whether or not a certain time period has elapsed since the speed of all of the four wheels was set to zero (S3). When the certain time period has not elapsed (NO in S3), the process returns.

[0063] When the certain time period has elapsed, that is, when four wheel speed values are zero during the certain time period (YES in S3), VP 120 provides information indicating "Standstill" to vehicle control interface 110 (S5).

<Procedure of Processing for Determining Moving Direction of Vehicle>

[0064] Fig. 5 is a flowchart showing a procedure of processing for determining a moving direction of the vehicle. Processing in the flowchart in Fig. 5 is repeatedly performed every prescribed control cycle in vehicle control interface 110. Though an example in which processing in the flowchart in Fig. 5 is performed by software processing by vehicle control interface 110 is described, a part or the entirety thereof may be implemented by hardware (electric circuitry) made in vehicle control interface 110.

[0065] Vehicle control interface 110 determines whether or not it has received information indicating "Standstill" from VP 120 (S11). When vehicle control interface 110 has received information indicating "Standstill" from VP 120 (YES in S11), it determines the moving direction of vehicle 10 as "Standstill" and sets the value 2 in the signal indicating the actual moving direction (S12).

[0066] When vehicle control interface 110 has not received information indicating "Standstill" from VP 120 (NO in S11), it determines whether or not the number of wheels rotating in the forward rotation direction is larger than two (S13). When the number of wheels rotating in the forward rotation direction is larger than two (YES in S13), vehicle control interface 110 determines the moving direction of vehicle 10 as "Forward" and sets the value 0 in the signal indicating the actual moving direction (S14).

[0067] When the number of wheels rotating in the forward rotation direction is not larger than two (NO in S13), that is, when the number of wheels rotating in the forward rotation direction is equal to or smaller than two, vehicle control interface 110 determines whether or not the number of wheels rotating in the reverse rotation direction is larger than two (S15). When the number of wheels rotating in the reverse rotation direction is larger than two (YES in S15), vehicle control interface 110 determines the moving direction of vehicle 10 as "Reverse" and sets the value 1 in the signal indicating the actual moving direction (S16).

[0068] When the number of wheels rotating in the reverse rotation direction is not larger than two (NO in S15), that is, when the number of wheels (two) rotating in the forward rotation direction is equal to the number of wheels (two) rotating in the reverse rotation direction, vehicle control interface 110 determines the moving direction of vehicle 10 as "Undefined" and sets the value 3 in the signal indicating the actual moving direction (S17).

[0069] When vehicle control interface 110 sets a value in the signal indicating the actual moving direction, it provides the signal indicating the actual moving direction to ADK 200 (S18). ADK 200 can thus recognize the moving direction of vehicle 10.

[0070] As set forth above, in the MaaS system according to the present embodiment, vehicle control interface 110 that interfaces between VP 120 and ADK 200 is provided. Vehicle control interface 110 determines the moving direction of vehicle 10 based on various types of information from VP 120. Then, vehicle control interface 110 provides the signal indicating the moving direction (the signal indicating the actual moving direction) of vehicle 10 to ADK 200. The moving direction of vehicle 10 can thus appropriately be conveyed to ADK 200. By appropriately conveying the moving direction of vehicle 10, ADK 200 can create a more proper driving plan and hence accuracy in autonomous driving can be enhanced.

[0071] Even though a developer of vehicle main body 100 is different from a developer of ADK 200, they can be in coordination with each other owing to development of vehicle main body 100 and ADK 200 in accordance with a procedure and a data format (API) determined for vehicle control interface 110.

[0072] Though an example in which vehicle control interface 110 determines the moving direction of vehicle 10 is described in the present embodiment, VP 120 may determine the moving direction of vehicle 10. In this case, vehicle control interface 110 relays the signal indicating the moving direction of vehicle 10 provided from VP 120 and provides the signal to ADK 200.

[Aspects]

[0073] The exemplary embodiment described above will be understood by a person skilled in the art as a specific example of aspects below.

(Clause 1) A vehicle according to one aspect is a vehicle on which an autonomous driving system is mountable. The vehicle includes a vehicle platform that controls the vehicle in accordance with an instruction from the autonomous driving system and a vehicle control interface that interfaces between the vehicle platform and the autonomous driving system. The vehicle control interface provides to the autonomous driving system, a signal indicating a moving

direction of the vehicle that is determined based on the majority rule in connection with rotation directions of wheels. (Clause 2) In the vehicle described in Clause 1, when all wheel speed values are zero during a certain time period, the vehicle control interface provides to the autonomous driving system, a signal indicating "Standstill" as the signal indicating the moving direction of the vehicle.

5 (Clause 3) In the vehicle described in Clause 1 or 2, when the number of wheels rotating in a forward rotation direction is larger than the number of wheels rotating in a reverse rotation direction, the vehicle control interface provides a signal indicating "Forward" to the autonomous driving system, and when the number of wheels rotating in the reverse rotation direction is larger than the number of wheels rotating in the forward rotation direction, the vehicle control interface provides a signal indicating "Reverse" to the autonomous driving system.

10 (Clause 4) In the vehicle described in any one of Clauses 1 to 3, when the number of wheels rotating in a forward rotation direction is equal to the number of wheels rotating in a reverse rotation direction, the vehicle control interface provides information indicating "Undefined" to the autonomous driving system.

(Clause 5) A vehicle according to one aspect includes an autonomous driving system that creates a driving plan, a vehicle platform that carries out vehicle control in accordance with an instruction from the autonomous driving system, and a vehicle control interface that interfaces between the vehicle platform and the autonomous driving system. The vehicle control interface provides to the autonomous driving system, a signal indicating a moving direction of the vehicle that is determined based on the majority rule in connection with rotation directions of wheels.

15 (Clause 6) In the vehicle described in Clause 5, when all wheel speed values are zero during a certain time period, the vehicle control interface provides to the autonomous driving system, a signal indicating "Standstill" as the signal indicating the moving direction of the vehicle.

20 (Clause 7) In the vehicle described in Clause 5 or 6, when the number of wheels rotating in a forward rotation direction is larger than the number of wheels rotating in a reverse rotation direction, the vehicle control interface provides a signal indicating "Forward" to the autonomous driving system, and when the number of wheels rotating in the reverse rotation direction is larger than the number of wheels rotating in the forward rotation direction, the vehicle control interface provides a signal indicating "Reverse" to the autonomous driving system.

25 (Clause 8) In the vehicle described in any one of Clauses 5 to 7, when the number of wheels rotating in a forward rotation direction is equal to the number of wheels rotating in a reverse rotation direction, the vehicle control interface provides information indicating "Undefined" to the autonomous driving system.

(Clause 9) A method of controlling a vehicle according to one aspect is a method of controlling a vehicle on which an autonomous driving system is mountable. The vehicle includes a vehicle platform that controls the vehicle in accordance with an instruction from the autonomous driving system and a vehicle control interface that interfaces between the vehicle platform and the autonomous driving system. The method includes providing to the autonomous driving system, by the vehicle control interface, a signal indicating a moving direction of the vehicle that is determined based on the majority rule in connection with rotation directions of wheels.

30 (Clause 10) The method of controlling a vehicle described in Clause 9 further includes providing to the autonomous driving system, by the vehicle control interface, a signal indicating "Standstill" as the signal indicating the moving direction of the vehicle when all wheel speed values are zero during a certain time period.

35 (Clause 11) The method of controlling a vehicle described in Clause 9 or 10 further includes providing, by the vehicle control interface, a signal indicating "Forward" to the autonomous driving system when the number of wheels rotating in a forward rotation direction is larger than the number of wheels rotating in a reverse rotation direction, and providing, by the vehicle control interface, a signal indicating "Reverse" to the autonomous driving system when the number of wheels rotating in the reverse rotation direction is larger than the number of wheels rotating in the forward rotation direction.

40 (Clause 12) The method of controlling a vehicle described in any one of Clauses 9 to 11 further includes providing, by the vehicle control interface, information indicating "Undefined" to the autonomous driving system when the number of wheels rotating in a forward rotation direction is equal to the number of wheels rotating in a reverse rotation direction.

50 **[0074]** Examples are given below. Although the examples mention Toyota, they can be transposed to other companies, e.g. other vehicle manufacturers.

[Example 1]

55 **[0075]** Toyota's MaaS Vehicle Platform
API Specification
for ADS Developers
[Standard Edition #0.1]
History of Revision

EP 3 858 700 A1

Table 1

Date of Revision	ver.	Summary of Revision	Reviser
2019/05/04	0.1	Creating a new material	MaaS Business Div.

5

Index

10

[0076]

1. Outline 4

1.1. Purpose of this Specification 4

1.2. Target Vehicle 4

1.3. Definition of Term 4

1.4. Precaution for Handling 4

15

2. Structure 5

2.1. Overall Structure of MaaS 5

2.2. System structure of MaaS vehicle 6

20

3. Application Interfaces 7

3.1. Responsibility sharing of when using APIs 7

3.2. Typical usage of APIs 7

3.3. APIs for vehicle motion control 9

25

3.3.1. Functions 9

3.3.2. Inputs 16

3.3.3. Outputs 23

30

3.4. APIs for BODY control 45

3.4.1. Functions 45

3.4.2. Inputs 45

3.4.3. Outputs 56

35

3.5. APIs for Power control 68

3.5.1. Functions 68

3.5.2. Inputs 68

3.5.3. Outputs 69

40

3.6. APIs for Safety 70

3.6.1. Functions 70

3.6.2. Inputs 70

3.6.3. Outputs 70

45

3.7. APIs for Security 74

3.7.1. Functions 74

3.7.2. Inputs 74

3.7.3. Outputs 76

50

3.8. APIs for MaaS Service 80

55

- 3.8.1. Functions 80
- 3.8.2. Inputs 80
- 3.8.3. Outputs 80

5 1. Outline

1.1. Purpose of this Specification

10 **[0077]** This document is an API specification of Toyota Vehicle Platform and contains the outline, the usage and the caveats of the application interface.

1.2. Target Vehicle

15 **[0078]** e-Palette, MaaS vehicle based on the POV (Privately Owned Vehicle) manufactured by Toyota

1.3. Definition of Term

[0079]

20 Table 2

Term	Definition
ADS	Autonomous Driving System.
ADK	Autonomous Driving Kit
VP	Vehicle Platform.
VCIB	Vehicle Control Interface Box. This is an ECU for the interface and the signal converter between ADS and Toyota VP's sub systems.

30 1.4. Precaution for Handling

[0080] This is an early draft of the document.

35 **[0081]** All the contents are subject to change. Such changes are notified to the users. Please note that some parts are still T.B.D. will be updated in the future.

2. Structure

2.1. Overall Structure of MaaS

40 **[0082]** The overall structure of MaaS with the target vehicle is shown (Fig. 6).

[0083] Vehicle control technology is being used as an interface for technology providers.

[0084] Technology providers can receive open API such as vehicle state and vehicle control, necessary for development of automated driving systems.

45 2.2. System structure of MaaS vehicle

[0085] The system architecture as a premise is shown (Fig. 7).

50 **[0086]** The target vehicle will adopt the physical architecture of using CAN for the bus between ADS and VCIB. In order to realize each API in this document, the CAN frames and the bit assignments are shown in the form of "bit assignment table" as a separate document.

3. Application Interfaces

55 3.1. Responsibility sharing of when using APIs

[0087] Basic responsibility sharing between ADS and vehicle VP is as follows when using APIs.

[ADS]

[0088] The ADS should create the driving plan, and should indicate vehicle control values to the VP.

5 [VP]

[0089] The Toyota VP should control each system of the VP based on indications from an ADS.

3.2. Typical usage of APIs

10

[0090] In this section, typical usage of APIs is described.

[0091] CAN will be adopted as a communication line between ADS and VP. Therefore, basically, APIs should be executed every defined cycle time of each API by ADS.

[0092] A typical workflow of ADS of when executing APIs is as follows (Fig. 8).

15

3.3. APIs for vehicle motion control

[0093] In this section, the APIs for vehicle motion control which is controllable in the MaaS vehicle is described.

20 3.3.1. Functions

3.3.1.1. Standstill, Start Sequence

[0094] The transition to the standstill (immobility) mode and the vehicle start sequence are described. This function presupposes the vehicle is in Autonomy_State = Autonomous Mode. The request is rejected in other modes.

25

[0095] The below diagram shows an example.

[0096] Acceleration Command requests deceleration and stops the vehicle. Then, when Longitudinal_Velocity is confirmed as 0 [km/h], Standstill Command = "Applied" is sent. After the brake hold control is finished, Standstill Status becomes "Applied". Until then, Acceleration Command has to continue deceleration request. Either Standstill Command = "Applied" or Acceleration Command's deceleration request were canceled, the transition to the brake hold control will not happen. After that, the vehicle continues to be standstill as far as Standstill Command = "Applied" is being sent. Acceleration Command can be set to 0 (zero) during this period.

30

[0097] If the vehicle needs to start, the brake hold control is cancelled by setting Standstill Command to "Released". At the same time, acceleration/deceleration is controlled based on Acceleration Command (Fig. 9).

35

[0098] EPB is engaged when Standstill Status = "Applied" continues for 3 minutes.

3.3.1.2. Direction Request Sequence

[0099] The shift change sequence is described. This function presupposes that Autonomy_State = Autonomous Mode. Otherwise, the request is rejected.

40

[0100] Shift change happens only during Actual_Moving_Direction = "standstill". Otherwise, the request is rejected.

[0101] In the following diagram shows an example. Acceleration Command requests deceleration and makes the vehicle stop. After Actual_Moving_Direction is set to "standstill", any shift position can be requested by Propulsion Direction Command. (In the example below, "D" → "R").

45

[0102] During shift change, Acceleration Command has to request deceleration.

[0103] After the shift change, acceleration/deceleration is controlled based on Acceleration Command value (Fig. 10).

3.3.1.3. WheelLock Sequence

[0104] The engagement and release of wheel lock is described. This function presupposes Autonomy_State = Autonomous Mode, otherwise the request is rejected.

50

[0105] This function is conductible only during vehicle is stopped. Acceleration Command requests deceleration and makes the vehicle stop. After Actual_Moving_Direction is set to "standstill", WheelLock is engaged by Immobilization Command = "Applied". Acceleration Command is set to Deceleration until Immobilization Status is set to "Applied".

55

[0106] If release is desired, Immobilization Command = "Release" is requested when the vehicle is stationary. Acceleration Command is set to Deceleration at that time.

[0107] After this, the vehicle is accelerated/decelerated based on Acceleration Command value (Fig. 11).

EP 3 858 700 A1

3.3.1.4. Road_Wheel_Angle Request

[0108] This function presupposes `Autonomy_State = "Autonomous Mode"`, and the request is rejected otherwise.

[0109] Tire Turning Angle Command is the relative value from `Estimated_Road_Wheel_Angle_Actual`.

[0110] For example, in case that `Estimated_Road_Wheel_Angle_Actual = 0.1 [rad]` while the vehicle is going straight;

[0111] If ADS requests to go straight ahead, Tire Turning Angle Command should be set to $0+0.1 = 0.1$ [rad].

[0112] If ADS requests to steer by -0.3 [rad], Tire Turning Angle Command should be set to $-0.3+0.1 = -0.2$ [rad].

3.3.1.5. Rider Operation

3.3.1.5.1. Acceleration Pedal Operation

[0113] While in Autonomous driving mode, accelerator pedal stroke is eliminated from the vehicle acceleration demand selection.

3.3.1.5.2. Brake Pedal Operation

[0114] The action when the brake pedal is operated. In the autonomy mode, target vehicle deceleration is the sum of 1) estimated deceleration from the brake pedal stroke and 2) deceleration request from AD system.

3.3.1.5.3. Shift_Lever_Operation

[0115] In Autonomous driving mode, driver operation of the shift lever is not reflected in Propulsion Direction Status.

[0116] If necessary, ADS confirms Propulsion Direction by Driver and changes shift position by using Propulsion Direction Command.

3.3.1.5.4. Steering Operation

[0117] When the driver (rider) operates the steering, the maximum is selected from

1) the torque value estimated from driver operation angle, and

2) the torque value calculated from requested wheel angle.

[0118] Note that Tire Turning Angle Command is not accepted if the driver strongly turns the steering wheel. The above-mentioned is determined by `Steering_Wheel_Intervention` flag.

3.3.2. Inputs

[0119]

Table 3

Signal Name	Description	Redundancy
Propulsion Direction Command	Request to switch between forward (D range) and back (R range)	N/A
Immobilization Command	Request to engage/release WheelLock	Applied
Standstill Command	Request to maintain stationary	Applied
Acceleration Command	Request to accelerate/decelerate	Applied
Tire Turning Angle Command	Request front wheel angle	Applied
Autonomization Command	Request to transition between manual mode and autonomy mode	Applied

EP 3 858 700 A1

3.3.2.1. Propulsion Direction Command

Request to switch between forward (D range) and back (R range)

5 Values

[0120]

Table 4

10

value	Description	Remarks
0	No Request	
2	R	Shift to R range
4	D	Shift to D range
other	<i>Reserved</i>	

15

Remarks

20

[0121]

25

- Only available when *Autonomy_State* = "Autonomous Mode"
- D/R is changeable only the vehicle is stationary (*Actual_Moving_Direction* = "standstill").
- The request while driving (moving) is rejected.
- When system requests D/R shifting, Acceleration Command is sent deceleration (-0.4 m/s²) simultaneously. (Only while brake is applied.)
- The request may not be accepted in following cases.
- *Direction_Control_Degradation_Modes* = "Failure detected"

30

35

3.3.2.2. Immobilization Command

Request to engage/release WheelLock

40 Values

[0122]

Table 5

45

value	Description	Remarks
0	No Request	
1	Applied	EPB is turned on and TM shifts to P range
2	Released	EPB is turned off and TM shifts to the value of Propulsion Direction Command

50

Remarks

55

[0123]

- Available only when *Autonomy_State* = "Autonomous Mode"
- Changeable only when the vehicle is stationary (*Actual_Moving_Direction* = "standstill")

EP 3 858 700 A1

- The request is rejected when vehicle is running.
- When Apply/Release mode change is requested, Acceleration Command is set to deceleration (-0.4 m/s²). (Only while brake is applied.)

5

3.3.2.3. Standstill Command

Request the vehicle to be stationary

10 Values

[0124]

Table 6

15

value	Description	Remarks
0	No Request	
1	Applied	Standstill is requested
2	Released	

20

Remarks

[0125]

25

- Only available when Autonomy_State = "Autonomous Mode"
- Confirmed by Standstill Status = "Applied"
- When the vehicle is stationary (Actual_Moving_Direction = "standstill"), transition to Stand Still is enabled.
- Acceleration Command has to be continued until Standstill Status becomes "Applied" and Acceleration Command's deceleration request (-0.4 m/s²) should be continued.
- There are more cases where the request is not accepted. Details are T.B.D.

30

3.3.2.4. Acceleration Command

35

Command vehicle acceleration

Values

Estimated_Max_Decel_Capability to Estimated_Max_Accel_Capability [m/s²]

40

Remarks

[0126]

45

- Only available when Autonomy_State = "Autonomous Mode"
- Acceleration (+) and deceleration (-) request based on Propulsion Direction Status direction
- The upper/lower limit will vary based on Estimated_Max_Decel_Capability and Estimated_Max_Accel_Capability.
- When acceleration more than Estimated_Max_Accel_Capability is requested, the request is set to Estimated_Max_Accel_Capability.
- When deceleration more than Estimated_Max_Decel_Capability is requested, the request is set to Estimated_Max_Decel_Capability.
- Depending on the accel/brake pedal stroke, the requested acceleration may not be met. See 3.4.1.4 for more detail.
- When Pre-Collision system is activated simultaneously, minimum acceleration (maximum deceleration) is selected.

50

55

3.3.2.5. Tire Turning Angle Command

Command tire turning angle

5 Values

[0127]

Table 7

10

value	Description	Remarks
-	[unit: rad]	

Remarks

15

[0128]

- Left is positive value (+). Right is negative value (-).
- Available only when `Autonomy_State = "Autonomous Mode"`
- The output of `Estimated_Road_Wheel_Angle_Actual` when the vehicle is going straight, is set to the reference value (0).
- This requests relative value of `Estimated_Road_Wheel_Angle_Actual`. (See 3.4.1.1 for details)
- The requested value is within `Current_Road_Wheel_Angle_Rate_Limit`.
- The requested value may not be fulfilled depending on the steer angle by the driver.

25

3.3.2.6. Autonomization Command

Request to transition between manual mode and autonomy mode

30

Values

[0129]

Table 8

35

value	Description	Remarks
00b	No Request For Autonomy	
01b	Request For Autonomy	
10b	Deactivation Request	means transition request to manual mode

40

[0130] • The mode may be able not to be transitioned to Autonomy mode. (e.g. In case that a failure occurs in the vehicle platform.)

45

3.3.3. Outputs

[0131]

Table 9

50

Signal Name	Description	Redundancy
Propulsion Direction Status	Current shift range	N/A
Propulsion Direction by Driver	Shift lever position by driver	N/A
Immobilization Status	Output of EPB and Shift P	Applied
Immobilization Request by Driver	EPB switch status by driver	N/A

55

EP 3 858 700 A1

(continued)

	Signal Name	Description	Redundancy
5	Standstill Status	Stand still status	N/A
	Estimated_Coasting_Rate	Estimated vehicle deceleration when throttle is closed	N/A
	Estimated_Max_Accel_Capability	Estimated maximum acceleration	Applied
	Estimated_Max_Decel_Capability	Estimated maximum deceleration	Applied
10	Estimated_Road_Wheel_Angle_Actual	Front wheel steer angle	Applied
	Estimated_Road_Wheel_Angle_Rate_Actual	Front wheel steer angle rate	Applied
	Steering_Wheel_Angle_Actual	Steering wheel angle	N/A
15	Steering_Wheel_Angle_Rate_Actual	Steering wheel angle rate	N/A
	Current_Road_Wheel_Angle_Rate_Limit	Road wheel angle rate limit	Applied
	Estimated_Max_Lateral_Acceleration_Capability	Estimated max lateral acceleration	Applied
20	Estimated_Max_Lateral_Acceleration_Rate_Capability	Estimated max lateral acceleration rate	Applied
	Accelerator_Pedal_Position	Position of the accelerator pedal (How much is the pedal depressed?)	N/A
25	Accelerator_Pedal_Intervention	This signal shows whether the accelerator pedal is depressed by a driver (intervention)	N/A
	Brake_Pedal_Position	Position of the brake pedal (How much is the pedal depressed?)	T.B.D.
30	Brake_Pedal_Intervention	This signal shows whether the brake pedal is depressed by a driver (intervention)	T.B.D.
	Steering_Wheel_Intervention	This signal shows whether the steering wheel is turned by a driver (intervention)	T.B.D.
35	Shift_Lever_Intervention	This signal shows whether the shift lever is controlled by a driver (intervention)	T.B.D.
	WheelSpeed_FL	wheel speed value (Front Left Wheel)	N/A
	WheelSpeed_FL_Rotation	Rotation direction of wheel (Front Left)	N/A
40	WheelSpeed_FR	wheel speed value (Front Right Wheel)	N/A
	WheelSpeed_FR_Rotation	Rotation direction of wheel (Front Right)	N/A
	WheelSpeed_RL	wheel speed value (Rear Left Wheel)	Applied
45	WheelSpeed_RL_Rotation	Rotation direction of wheel (Rear Left)	Applied
	WheelSpeed_RR	wheel speed value (Rear Right Wheel)	Applied
	WheelSpeed_RR_Rotation	Rotation direction of wheel (Rear Right)	Applied
	Actual_Moving_Direction	Moving direction of vehicle	Applied
50	Longitudinal_Velocity	Estimated longitudinal velocity of vehicle	Applied
	Longitudinal_Acceleration	Estimated longitudinal acceleration of vehicle	Applied
	Lateral_Acceleration	Sensor value of lateral acceleration of vehicle	Applied
55	Yawrate	Sensor value of Yaw rate	Applied
	Autonomy_State	State of whether autonomy mode or manual mode	Applied

EP 3 858 700 A1

(continued)

Signal Name	Description	Redundancy
Autonomy_Ready	Situation of whether the vehicle can transition to autonomy mode or not	Applied
Autonomy_Fault	Status of whether the fault regarding a functionality in autonomy mode occurs or not	Applied

3.3.3.1. Propulsion Direction Status

Current shift range

Values

[0132]

Table 10

value	Description	remarks
0	<i>Reserved</i>	
1	P	
2	R	
3	N	
4	D	
5	B	
6	<i>Reserved</i>	
7	Invalid value	

Remarks

[0133]

- When the shift range is indeterminate, this output is set to "Invalid Value".
- When the vehicle becomes the following status during VO mode, [Propulsion Direction Status] will turn to "P".
 - [Longitudinal_Velocity] = 0 [km/h]
 - [Brake_Pedal_Position] < Threshold value (T.B.D.) (in case of being determined that the pedal isn't depressed)
 - [1st_Left_Seat_Belt_Status] = Unbuckled
 - [1st_Left_Door_Open_Status] = Opened

3.3.3.2. Propulsion Direction by Driver

Shift lever position by driver operation

Values

[0134]

Table 11

value	Description	remarks
0	No Request	
1	P	

EP 3 858 700 A1

(continued)

value	Description	remarks
2	R	
3	N	
4	D	
5	B	
6	<i>Reserved</i>	
7	Invalid value	

Remarks

[0135]

- Output based on the lever position operated by driver
- If the driver releases his hand of the shift lever, the lever returns to the central position and the output is set as "No Request".
- When the vehicle becomes the following status during NVO mode, [Propulsion Direction by Driver] will turn to "1(P)".
 - [Longitudinal_Velocity] = 0 [km/h]
 - [Brake_Pedal_Position] < Threshold value (T.B.D.) (in case of being determined that the pedal isn't depressed)
 - [1st_Left_Seat_Belt_Status] = Unbuckled
 - [1st_Left_Door_Open_Status] = Opened

3.3.3.3. Immobilization Status

Output EPB and Shift-P status

Values

<Primary>

[0136]

Table 12

Value		Description	Remarks
Shift	EPB		
0	0	Shift set to other than P, and EPB Released	
1	0	Shift set to P and EPB Released	
0	1	Shift set to other than P, and EPB applied	
1	1	Shift set to P and EPB Applied	

<Secondary>

[0137]

EP 3 858 700 A1

Table 13

Value		Description	Remarks
Shift			
0	0	Other than Shift P	
1	0	Shift P	
0	1	<i>Reserved</i>	
1	1	<i>Reserved</i>	

Remarks

[0138]

- Secondary signal does not include EPB lock status.

3.3.3.4. Immobilization Request by Driver

Driver operation of EPB switch

Values

[0139]

Table 14

value	Description	remarks
0	No Request	
1	Engaged	
2	Released	
3	Invalid value	

Remarks

[0140]

- "Engaged" is outputted while the EPB switch is being pressed.
- "Released" is outputted while the EPB switch is being pulled.

3.3.3.5. Standstill Status

Vehicle stationary status

Values

[0141]

Table 15

Value	Description	remarks
0	Released	
1	Applied	
2	<i>Reserved</i>	

EP 3 858 700 A1

(continued)

Value	Description	remarks
3	Invalid value	

5

Remarks

[0142]

10

- When Standstill Status = Applied continues for 3 minutes, EPB is activated.
- If the vehicle is desired to start, ADS requests Standstill Command = "Released".

3.3.3.6. Estimated_Coasting_Rate

15

[0143] Estimated vehicle deceleration when throttle is closed

Values

20

[0144] [unit: m/s²]

Remarks

[0145]

25

- Estimated acceleration at WOT is calculated.
- Slope and road load etc. are taken into estimation.
- When the Propulsion Direction Status is "D", the acceleration to the forward direction shows a positive value.
- When the Propulsion Direction Status is "R", the acceleration to the reverse direction shows a positive value.

30

3.3.3.7. Estimated_Max_Accel_Capability

Estimated maximum acceleration

35

Values

[0146] [unit: m/s²]

Remarks

40

[0147]

45

- The acceleration at WOT is calculated.
- Slope and road load etc. are taken into estimation.
- The direction decided by the shift position is considered to be plus.

3.3.3.8. Estimated_Max_Decel_Capability

Estimated maximum deceleration

50

Values

[0148] -9.8 to 0 [unit: m/s²]

55

Remarks

[0149]

EP 3 858 700 A1

- Affected by Brake_System_Degradation_Modes. Details are T.B.D.
- Based on vehicle state or road condition, cannot output in some cases

3.3.3.9. Estimated_Road_Wheel_Angle_Actual

5

Front wheel steer angle

Values

10 **[0150]**

Table 16

value	Description	Remarks
others	[unit: rad]	
Minimum Value	Invalid value	The sensor is invalid.

15

Remarks

20

[0151]

- Left is positive value (+). Right is negative value (-).
- Before "the wheel angle when the vehicle is going straight" becomes available, this signal is Invalid value.

25

3.3.3.10. Estimated_Road_Wheel_Angle_Rate_Actual

Front wheel steer angle rate

Values

30

[0152]

Table 17

value	Description	Remarks
others	[unit: rad/s]	
Minimum Value	Invalid value	

35

Remarks

40

[0153]

- Left is positive value (+). Right is negative value (-).

45

3.3.3.11. Steering_Wheel_Angle_Actual

Steering wheel angle

Values

50

[0154]

Table 18

Value	Description	Remarks
others	[unit: rad]	

55

EP 3 858 700 A1

(continued)

Value	Description	Remarks
Minimum Value	Invalid value	

5

Remarks

[0155]

10

- Left is positive value (+). Right is negative value (-).
- The steering angle converted from the steering assist motor angle
- Before "the wheel angle when the vehicle is going straight" becomes available, this signal is Invalid value.

15

3.3.3.12. Steering_Wheel_Angle_Rate_Actual

Steering wheel angle rate

Values

20

[0156]

Table 19

Value	Description	Remarks
others	[unit: rad/s]	
Minimum Value	Invalid value	

25

30

Remarks

[0157]

35

- Left is positive value (+). Right is negative value (-).
- The steering angle rate converted from the steering assist motor angle rate 3.3.3.13. Current_Road_Wheel_Angle_Rate_Limit

Road wheel angle rate limit

40

Values

[0158]

45

- When stopped: 0.4 [rad/s]
- While running: Show "Remarks"

Remarks

[0159] Calculated from the "vehicle speed - steering angle rate" chart like below

50

- A) At a very low speed or stopped situation, use fixed value of 0.4 [rad/s]
- B) At a higher speed, the steering angle rate is calculated from the vehicle speed using 2.94 m/s^3

[0160] The threshold speed between A and B is 10 [km/h] (Fig. 12).

55

EP 3 858 700 A1

3.3.3.14. Estimated_Max_Lateral_Acceleration_Capability

Estimated max lateral acceleration

5 Values

[0161] 2.94 [unit: m/s²] fixed value

Remarks

10

[0162]

- Wheel Angle controller is designed within the acceleration range up to 2.94 m/s².

15

3.3.3.15. Estimated_Max_Lateral_Acceleration_Rate_Capability

Estimated max lateral acceleration rate

Values

20

[0163] 2.94 [unit: m/s³] fixed value

Remarks

25

[0164]

- Wheel Angle controller is designed within the acceleration range up to 2.94 m/s³.

3.3.3.16. Accelerator_Pedal_Position

30

[0165] Position of the accelerator pedal (How much is the pedal depressed?)

Values

35

[0166] 0 to 100 [unit: %]

Remarks

40

[0167]

- In order not to change the acceleration openness suddenly, this signal is filtered by smoothing process.
- In normal condition
The accelerator position signal after zero point calibration is transmitted.
- In failure condition
Transmitted failsafe value (0×FF)

45

3.3.3.17. Accelerator_Pedal_Intervention

[0168] This signal shows whether the accelerator pedal is depressed by a driver (intervention).

50

Values

[0169]

55

Table 20

Value	Description	Remarks
0	Not depressed	

EP 3 858 700 A1

(continued)

Value	Description	Remarks
1	depressed	
2	Beyond autonomy acceleration	

Remarks

[0170]

- When Accelerator_Pedal_Position is higher than the defined threshold value (ACCL_INTV), this signal [Accelerator_Pedal_Intervention] will turn to "depressed".

[0171] When the requested acceleration from depressed acceleration pedal is higher than the requested acceleration from system (ADS, PCS etc.), this signal will turn to "Beyond autonomy acceleration".

- During NVO mode, accelerator request will be rejected. Therefore, this signal will not turn to "2".

[0172] Detail design (Fig. 13)

3.3.3.18. Brake_Pedal_Position

[0173] Position of the brake pedal (How much is the pedal depressed?)

Values

[0174] 0 to 100 [unit: %]

Remarks

[0175]

- In the brake pedal position sensor failure:
Transmitted failsafe value (0×FF)
- Due to assembling error, this value might be beyond 100%.

3.3.3.19. Brake_Pedal_Intervention

[0176] This signal shows whether the brake pedal is depressed by a driver (intervention).

Values

[0177]

Table 21

Value	Description	Remarks
0	Not depressed	
1	depressed	
2	Beyond autonomy deceleration	

Remarks

[0178]

EP 3 858 700 A1

- When Brake_Pedal_Position is higher than the defined threshold value (BRK_INTV), this signal [Brake_Pedal_Intervention] will turn to "depressed".
- When the requested deceleration from depressed brake pedal is higher than the requested deceleration from system (ADS, PCS etc.), this signal will turn to "Beyond autonomy deceleration".

[0179] Detail design (Fig. 14)

3.3.3.20. Steering_Wheel_Intervention

[0180] This signal shows whether the steering wheel is turned by a driver (intervention).

Values

[0181]

Table 22

Value	Description	Remarks
0	Not turned	
1	Turned collaboratively	Driver steering torque + steering motor torque
2	Turned by human driver	

Remarks

[0182]

- In "Steering Wheel Intervention = 1", considering the human driver's intent, EPS system will drive the steering with the Human driver collaboratively.
- In "Steering Wheel Intervention = 2", considering the human driver's intent, EPS system will reject the steering requirement from autonomous driving kit. (The steering will be driven the human driver.)

3.3.3.21. Shift_Lever_Intervention

[0183] This signal shows whether the shift lever is controlled by a driver (intervention).

Values

[0184]

Table 23

Value	Description	Remarks
0	OFF	
1	ON	Controlled (moved to any shift position)

Remarks

[0185]

- N/A

EP 3 858 700 A1

3.3.3.22. WheelSpeed_FL, WheelSpeed_FR, WheelSpeed_RL, WheelSpeed_RR wheel speed value

Values

5 **[0186]**

Table 24

10

Value	Description	Remarks
others	Velocity [unit: m/s]	
Maximum Value	Invalid value	The sensor is invalid.

Remarks

15

[0187]

- T.B.D.

20

3.3.3.23. WheelSpeed_FL_Rotation, WheelSpeed_FR_Rotation, WheelSpeed_RL_Rotation, WheelSpeed_RR_Rotation

Rotation direction of each wheel

25

Values

[0188]

Table 25

30

value	Description	remarks
0	Forward	
1	Reverse	
2	<i>Reserved</i>	
3	Invalid value	The sensor is invalid.

35

Remarks

40

[0189]

- After activation of ECU, until the rotation direction is fixed, "Forward" is set to this signal.
- When detected continuously 2 (two) pulses with the same direction, the rotation direction will be fixed.

45

3.3.3.24. Actual_Moving_Direction

Rotation direction of wheel

50

Values

[0190]

Table 26

55

value	Description	remarks
0	Forward	
1	Reverse	

EP 3 858 700 A1

(continued)

value	Description	remarks
2	Standstill	
3	Undefined	

Remarks

[0191]

- This signal shows "Standstill" when four wheel speed values are "0" during a constant time.
- When other than above, this signal will be determined by the majority rule of four WheelSpeed_Rotations.
- When more than two WheelSpeed_Rotations are "Reverse", this signal shows "Reverse".
- When more than two WheelSpeed_Rotations are "Forward", this signal shows "Forward".
- When "Forward" and "Reverse" are the same counts, this signal shows "Undefined".

3.3.3.25. Longitudinal_Velocity

Estimated longitudinal velocity of vehicle

Values

[0192]

Table 27

Value	Description	Remarks
others	Velocity [unit: m/s]	
Maximum Value	Invalid value	The sensor is invalid.

Remarks

[0193]

- This signal is output as the absolute value.

3.3.3.26. Longitudinal_Acceleration

Estimated longitudinal acceleration of vehicle

Values

[0194]

Table 28

value	Description	Remarks
others	Acceleration [unit: m/s ²]	
Minimum Value	Invalid value	The sensor is invalid.

Remarks

[0195]

- This signal will be calculated with wheel speed sensor and acceleration sensor.

EP 3 858 700 A1

- When the vehicle is driven at a constant velocity on the flat road, this signal shows "0".

3.3.3.27. Lateral_Acceleration

5 Sensor value of lateral acceleration of vehicle

Values

10 **[0196]**

Table 29

Value	Description	Remarks
others	Acceleration [unit: m/s ²]	
Minimum Value	Invalid value	The sensor is invalid.

Remarks

20 **[0197]**

- The positive value means counterclockwise. The negative value means clockwise.

3.3.3.28. Yawrate

25 Sensor value of Yaw rate

Values

30 **[0198]**

Table 30

Value	Description	Remarks
others	Yaw rate [unit: deg/s]	
Minimum Value	Invalid value	The sensor is invalid.

Remarks

40 **[0199]**

- The positive value means counterclockwise. The negative value means clockwise.

3.3.3.29. Autonomy_State

45 State of whether autonomy mode or manual mode

Values

50 **[0200]**

Table 31

value	Description	Remarks
00	Manual Mode	The mode starts from Manual mode.
01	Autonomous Mode	

Remarks

[0201]

- The initial state is the Manual mode. (When Ready ON, the vehicle will start from the Manual mode.)

3.3.3.30. Autonomy_Ready

Situation of whether the vehicle can transition to autonomy mode or not

Values

[0202]

Table 32

value	Description	Remarks
00b	Not Ready For Autonomy	
01b	Ready For Autonomy	
11b	Invalid	means the status is not determined.

Remarks

[0203]

- This signal is a part of transition conditions toward the Autonomy mode.

[0204] Please see the summary of conditions.

3.3.3.31. Autonomy_Fault

Status of whether the fault regarding a functionality in autonomy mode occurs or not Values

[0205]

Table 33

value	Description	Remarks
00b	No fault	
01b	Fault	
11b	Invalid	means the status is not determined.

Remarks

[0206]

- [T.B.D.] Please see the other material regarding the fault codes of a functionality in autonomy mode.
- [T.B.D.] Need to consider the condition to release the status of "fault".

3.4. APIs for BODY control

3.4.1. Functions

[0207] T.B.D.

EP 3 858 700 A1

3.4.2. Inputs

[0208]

5

Table 34

10

15

20

25

30

35

40

45

50

55

Signal Name	Description	Redundancy
Turnsignallight_Mode_Command	Command to control the turnsignallight mode of the vehicle platform	N/A
Headlight_Mode_Command	Command to control the headlight mode of the vehicle platform	N/A
Hazardlight_Mode_Command	Command to control the hazardlight mode of the vehicle platform	N/A
Horn_Pattern_Command	Command to control the pattern of horn ON-time and OFF-time per cycle of the vehicle platform	N/A
Horn_Number_of_Cycle_Command	Command to control the Number of horn ON/OFF cycle of the vehicle platform	N/A
Horn_Continuous_Command	Command to control of horn ON of the vehicle platform	N/A
Windshieldwiper_Mode_Front_Command	Command to control the front windshield wiper of the vehicle platform	N/A
Windshieldwiper_Intermittent_Wiping_Speed_Command	Command to control the Windshield wiper actuation interval at the Intermittent mode	N/A
Windshieldwiper_Mode_Rear_Command	Command to control the rear windshield wiper mode of the vehicle platform	N/A
Hvac_1st_Command	Command to start/stop 1st row air conditioning control	N/A
Hvac_2nd_Command	Command to start/stop 2nd row air conditioning control	N/A
Hvac_TargetTemperature_1 st_Left_Command	Command to set the target temperature around front left area	N/A
Hvac_TargetTemperature_1st_Right_Command	Command to set the target temperature around front right area	N/A
Hvac_TargetTemperature_2nd_Left_Command	Command to set the target temperature around rear left area	N/A
Hvac_TargetTemperature_2nd_Right_Command	Command to set the target temperature around rear right area	N/A
Hvac_Fan_Level_1 st_Row_Command	Command to set the fan level on the front AC	N/A
Hvac_Fan_Level_2nd_Row_Command	Command to set the fan level on the rear AC	N/A
Hvac_1 st_Row_AirOutlet_Mode_Command	Command to set the mode of 1st row air outlet	N/A
Hvac_2nd_Row_AirOutlet_Mode_Command	Command to set the mode of 2nd row air outlet	N/A
Hvac_Recirculate_Command	Command to set the air recirculation mode	N/A
Hvac_AC_Command	Command to set the AC mode	N/A

EP 3 858 700 A1

3.4.2.1. Turnsignallight_Mode_Command

Command to control the turnsignallight mode of the vehicle platform

5 Values

[0209]

Table 35

10

value	Description	remarks
0	OFF	Blinker OFF
1	Right	Right blinker ON
2	Left	Left blinker ON
3	reserved	

15

Remarks

20

[0210] T.B.D.

Detailed Design

25

[0211] When Turnsignallight_Mode_Command = 1, vehicle platform sends left blinker on request.

[0212] When Turnsignallight_Mode_Command = 2, vehicle platform sends right blinker on request.

3.4.2.2. Headlight_Mode_Command

30

Command to control the headlight mode of the vehicle platform

Values

[0213]

35

Table 36

40

Value	Description	remarks
0	No Request	Keep current mode
1	TAIL mode request	side lamp mode
2	HEAD mode request	Lo mode
3	AUTO mode request	
4	HI mode request	
5	OFF Mode Request	
6-7	reserved	

45

50 Remarks

[0214]

55

- This command is valid when Headlight_Driver_Input = OFF or Auto mode ON.
- Driver input overrides this command.
- Headlight mode changes when Vehicle platform receives once this command.

3.4.2.3. Hazardlight_Mode_Command

Command to control the hazardlight mode of the vehicle platform

5 Values

[0215]

Table 37

10

value	Description	remarks
0	OFF	command for hazardlight OFF
1	ON	command for hazardlight ON

15

Remarks

[0216]

20

- Driver input overrides this command.
- Hazardlight is active during Vehicle Platform receives ON command.

3.4.2.4. Horn_Pattern_Command

25

Command to control the pattern of horn ON-time and OFF-time per cycle of the vehicle platform

Values

30

[0217]

Table 38

35

value	Description	remarks
0	No request	
1	Pattern 1	ON-time: 250ms OFF-time: 750ms
2	Pattern 2	ON-time: 500ms OFF-time: 500ms
3	Pattern 3	reserved
4	Pattern 4	reserved
5	Pattern 5	reserved
6	Pattern 6	reserved
7	Pattern 7	Reserved

40

45

Remarks

[0218]

50

- Pattern 1 is assumed to use single short ON, Pattern 2 is assumed to use ON-OFF repeating.
- Detail is under internal discussion.

55

3.4.2.5. Horn_Number_of_Cycle_Command

Command to control the Number of horn ON/OFF cycle of the vehicle platform Values

5 **[0219]** 0-7 [-]

Remarks

10 **[0220]**

- Detail is under internal discussion.

3.4.2.6. Horn_Continuous_Command

15 Command to control of horn ON of the vehicle platform

Values

20 **[0221]**

Table 39

value	Description	remarks
0	No request	
1	ON request	

25

Remarks

30 **[0222]**

- This command overrides Horn_Pattern_Command, Horn_Number_of_Cycle_Command.
- Horn is active during Vehicle Platform receives ON command.
- Detail is under internal discussion.

35

3.4.2.7. Windshieldwiper_Mode_Front_Command

40 Command to control the front windshield wiper of the vehicle platform

Values

45 **[0223]**

Table 40

value	Description	remarks
0	OFF mode request	
1	Lo mode request	
2	Hi mode request	
3	Intermittent mode request	
4	Auto mode request	
5	Mist mode request	One-Time Wiping
6, 7	Reserved	

50

55

Remarks

[0224]

- 5 • This command is under internal discussion the timing of valid.
- This command is valid when Windshieldwiper_Front_Driver_Input = OFF or Auto mode ON.
- 10 • Driver input overrides this command.
- Windshieldwiper mode is kept during Vehicle platform is receiving the command.

3.4.2.8. Windshieldwiper_Intermittent_Wiping_Speed_Command

15 Command to control the Windshield wiper actuation interval at the Intermittent mode

Values

[0225]

Table 41

value	Description	remarks
0	FAST	
1	SECONDFAST	
2	THIRD FAST	
3	SLOW	

Remarks

[0226]

- 35 • This command is valid when Windshieldwiper_Mode_Front_Status = INT.
- Driver input overrides this command.
- Windshieldwiper intermittent mode changes when Vehicle platform receives once this command.

3.4.2.9. Windshieldwiper_Mode_Rear_Command

40 Command to control the rear windshield wiper mode of the vehicle platform

Values

[0227]

Table 42

value	Description	Remarks
0	OFF mode request	
1	Lo mode request	
2	reserved	
3	Intermittent mode request	
4-7	reserved	

Remarks

[0228]

- 5 • Driver input overrides this command.
- Windshieldwiper mode is kept during Vehicle platform is receiving the command.
- 10 • Wiping speed of intermittent mode is not variable.

3.4.2.10. Hvac_1st_Command

Command to start/stop 1st row air conditioning control

15 Values

[0229]

Table 43

value	Description	Remarks
00	No request	
01	ON	means turning the 1st air conditioning control to ON
02	OFF	means turning the 1st air conditioning control to OFF

Remarks

[0230]

- 30 • The hvac of S-AM has a synchronization functionality.

[0231] Therefore, in order to control 4 (four) hvacs (1st_left/right, 2nd_left/right) individually, VCIB achieves the following procedure after Ready-ON. (This functionality will be implemented from the CV.)

- 35 #1: Hvac_1st_Command = ON
- #2: Hvac_2nd_Command = ON
- 40 #3: Hvac_TargetTemperature_2nd_Left_Command
- #4: Hvac_TargetTemperature_2nd_Right_Command
- #5: Hvac_Fan_Level_2nd_Row_Command
- 45 #6: Hvac_2nd_Row_AirOutlet_Mode_Command
- #7: Hvac_TargetTemperature_1st_Left_Command
- 50 #8: Hvac_TargetTemperature_1st_Right_Command
- #9: Hvac_Fan_Level_1st_Row_Command
- #10: Hvac_1st_Row_AirOutlet_Mode_Command
- 55 * The interval between each command needs 200ms or more.

EP 3 858 700 A1

* Other commands are able to be executed after #1.

3.4.2.11. Hvac_2nd_Command

5 Command to start/stop 2nd row air conditioning control

Values

[0232]

10

Table 44

value	Description	Remarks
00	No request	
01	ON	means turning the 2nd air conditioning control to ON
02	OFF	means turning the 2nd air conditioning control to OFF

15

Remarks

20

[0233]

- N/A

25

3.4.2.12. Hvac_TargetTemperature_1st_Left_Command

Command to set the target temperature around front left area

Values

30

[0234]

Table 45

value	Description	Remarks
0	No request	
60 to 85 [unit: °F] (by 1.0°F)	Temperature direction	

35

Remarks

40

[0235]

- N/A

45

3.4.2.13. Hvac_TargetTemperature_1st_Right_Command

Command to set the target temperature around front right area

Values

50

[0236]

Table 46

value	Description	Remarks
0	No request	

55

EP 3 858 700 A1

(continued)

value	Description	Remarks
60 to 85 [unit: °F] (by 1.0°F)	Temperature direction	

5

Remarks

[0237]

10

- N/A

3.4.2.14. Hvac_TargetTemperature_2nd_Left_Command

15

Command to set the target temperature around rear left area

Values

[0238]

20

Table 47

value	Description	Remarks
0	No request	
60 to 85 [unit: °F] (by 1.0°F)	Temperature direction	

25

Remarks

[0239]

30

- N/A

3.4.2.15. Hvac_TargetTemperature_2nd_Right_Command

35

Command to set the target temperature around rear right area

Values

[0240]

40

Table 48

value	Description	Remarks
0	No request	
60 to 85 [unit: °F] (by 1.0°F)	Temperature direction	

45

Remarks

[0241]

50

- N/A

55

EP 3 858 700 A1

3.4.2.16. Hvac_Fan_Level_1st_Row_Command

Command to set the fan level on the front AC

5 Values

[0242]

Table 49

value	Description	Remarks
0	No request	
1 to 7 (Maximum)	Fan level direction	

15 Remarks

[0243]

- 20 • If you would like to turn the fan level to 0 (OFF), you should transmit "Hvac_1st_Command = OFF".
- If you would like to turn the fan level to AUTO, you should transmit "Hvac_1st_Command = ON".

3.4.2.17. Hvac_Fan_Level_2nd_Row_Command

25 Command to set the fan level on the rear AC

Values

30 **[0244]**

Table 50

value	Description	Remarks
0	No request	
1 to 7 (Maximum)	Fan level direction	

35 Remarks

40 **[0245]**

- If you would like to turn the fan level to 0 (OFF), you should transmit "Hvac_2nd_Command = OFF".
- 45 • If you would like to turn the fan level to AUTO, you should transmit "Hvac_2nd_Command = ON".

3.4.2.18. Hvac_1st_Row_AirOutlet_Mode_Command

Command to set the mode of 1st row air outlet

50 Values

[0246]

Table 51

value	Description	Remarks
000b	No Operation	

55

EP 3 858 700 A1

(continued)

value	Description	Remarks
001b	UPPER	Air flows to the upper body
010b	U/F	Air flows to the upper body and feet
011b	FEET	Air flows to the feet.
100b	F/D	Air flows to the feet and the windshield defogger operates

Remarks

[0247]

- N/A

3.4.2.19. Hvac_2nd_Row_AirOutlet_Mode_Command Command to set the mode of 2nd row air outlet

Values

[0248]

Table 52

value	Description	Remarks
000b	No Operation	
001b	UPPER	Air flows to the upper body
010b	U/F	Air flows to the upper body and feet
011b	FEET	Air flows to the feet.

Remarks

[0249]

- N/A

3.4.2.20. Hvac_Recirculate_Command

Command to set the air recirculation mode

Values

[0250]

Table 53

value	Description	Remarks
00	No request	
01	ON	means turning the air recirculation mode ON
02	OFF	means turning the air recirculation mode OFF

Remarks

[0251]

EP 3 858 700 A1

- N/A

3.4.2.21. Hvac_AC_Command

5 Command to set the AC mode

Values

10 **[0252]**

Table 54

value	Description	remarks
00	No request	
01	ON	means turning the AC mode ON
02	OFF	means turning the AC mode OFF

20 Remarks

[0253]

- N/A

25 3.4.3. Outputs

[0254]

Table 55

Signal Name	Description	Redundancy
Turnsignallight_Mode_Status	Status of the current turnsignallight mode of the vehicle platform	N/A
Headlight_Mode_Status	Status of the current headlight mode of the vehicle platform	N/A
35 Hazardlight_Mode_Status	Status of the current hazardlight mode of the vehicle platform	N/A
Horn_Status	Status of the current horn of the vehicle platform	N/A
Windshieldwiper_Mode_Front_Status	Status of the current front windshield wiper mode of the vehicle platform	N/A
40 Windshieldwiper_Mode_Rear_Status	Status of the current rear windshield wiper mode of the vehicle platform	N/A
Hvac_1 st _Status	Status of activation of the 1 st row HVAC	N/A
Hvac_2 nd _Status	Status of activation of the 2 nd row HVAC	N/A
45 Hvac_Temperature_1 st _Left_Status	Status of set temperature of 1 st row left	N/A
Hvac_Temperature_1 st _Right_Status	Status of set temperature of 1 st row right	N/A
50 Hvac_Temperature_2 nd _Left_Status	Status of set temperature of 2 nd row left	N/A
Hvac_Temperature_2 nd _Right_Status	Status of set temperature of 2 nd row right	N/A
55 Hvac_Fan_Level_1 st _Row_Status	Status of set fan level of 1 st row	N/A

EP 3 858 700 A1

(continued)

Signal Name	Description	Redundancy
Hvac_Fan_Level_2 nd _Row_Status	Status of set fan level of 2 nd row	N/A
Hvac_1st_Row_AirOutlet_Mode_Status	Status of mode of 1st row air outlet	N/A
Hvac_2nd_Row_AirOutlet_Mode_Status	Status of mode of 2nd row air outlet	N/A
Hvac_Recirculate_Status	Status of set air recirculation mode	N/A
Hvac_AC_Status	Status of set AC mode	N/A
1st_Right_Seat_Occupancy_Status	Seat occupancy status in 1st left seat	-
1st_Left_Seat_Belt_Status	Status of driver's seat belt buckle switch	-
1st_Right_Seat_Belt_Status	Status of passenger's seat belt buckle switch	-
2nd_Left_Seat_Belt_Status	Seat belt buckle switch status in 2nd left seat	-
2nd_Right_Seat_Belt_Status	Seat belt buckle switch status in 2nd right seat	-

3.4.3.1. Turnsignallight_Mode_Status

Status of the current turnsignallight mode of the vehicle platform

Values

[0255]

Table 56

value	Description	Remarks
0	OFF	Turn lamp = OFF
1	Left	Turn lamp L = ON (flashing)
2	Right	Turn lamp R = ON (flashing)
3	invalid	

Remarks

[0256]

- At the time of the disconnection detection of the turn lamp, state is ON.
- At the time of the short detection of the turn lamp, State is OFF.

3.4.3.2. Headlight_Mode_Status

Status of the current headlight mode of the vehicle platform

Values

[0257]

EP 3 858 700 A1

Table 57

Value	Description	Remarks
0	OFF	
1	TAIL	
2	Lo	
3	reserved	
4	Hi	
5-6	reserved	
7	invalid	

5

10

15 Remarks

[0258] N/A

Detailed Design

20

[0259]

- At the time of tail signal ON, Vehicle Platform sends 1.
- At the time of Lo signal ON, Vehicle Platform sends 2.
- At the time of Hi signal ON, Vehicle Platform sends 4.
- At the time of any signal above OFF, Vehicle Platform sends 0.

25

30

3.4.3.3. Hazardlight_Mode_Status

Status of the current hazard lamp mode of the vehicle platform

35 Values

[0260]

Table 58

Value	Description	Remarks
0	OFF	Hazard lamp = OFF
1	Hazard	Hazard lamp = ON (flashing)
2	reserved	
3	invalid	

40

45

Remarks

50

[0261] N/A

55

EP 3 858 700 A1

3.4.3.4. Horn_Status

Status of the current horn of the vehicle platform

5 Values

[0262]

Table 59

10

Value	Description	Remarks
0	OFF	
1	ON	
2	reserved (unsupport)	
3	invalid (unsupport)	

15

Remarks

20

[0263]

- cannot detect any failure.
- Vehicle platform sends "1" during Horn Pattern Command is active, if the horn is OFF.

25

3.4.3.5. Windshieldwiper_Mode_Front_Status

Status of the current front windshield wiper mode of the vehicle platform

30

Values

[0264]

Table 60

35

Value	Description	Remarks
0	OFF	Front wiper stopped
1	Lo	Front wiper being active in LO mode (also including being active in MIST, being active in coordination with washer, and being wiping at speed other than HI)
2	Hi	Front wiper being active in HI mode
3	INT	Front wiper being active in INT mode (also including motor stop while being active in INT mode and being active in INT mode owing to vehicle speed change function)
4-5	reserved	
6	fail	Front wiper failed
7	invalid	

40

45

50

Table 61

Value	Description	Remarks
0	OFF	Front wiper is stopped.
1	Lo	Front wiper is in LO mode (include in MIST mode, operation with washer, Medium speed).
2	Hi	Front wiper is in HI mode.

55

EP 3 858 700 A1

(continued)

Value	Description	Remarks
3	INT	Front wiper is in INT mode (include motor stopped between INT mode, INT operation of vehicle speed change function).
4-5	reserved	
6	fail	Front wiper is fail.
7	invalid	

Remarks

Fail Mode Conditions

[0265]

- detect signal discontinuity
- cannot detect except the above failure.

3.4.3.6. Windshieldwiper_Mode_Rear_Status

Status of the current rear windshield wiper mode of the vehicle platform

Values

[0266]

Table 62

Value	Description	Remarks
0	OFF	Rear wiper stopped
1	Lo	Rear wiper being in LO mode
2	reserved	
3	INT	Rear wiper being in INT mode
4-5	reserved	
6	fail	Rear wiper failed
7	invalid	

Remarks

[0267]

- cannot detect any failure.

3.4.3.7. Hvac_1st_Status

Status of activation of the 1st row HVAC

Values

[0268]

EP 3 858 700 A1

Table 63

value	Description	remarks
0b	OFF	
1b	ON	

5

Remarks

10

[0269]

- N/A

15

3.4.3.8. Hvac_2nd_Status

Status of activation of the 2nd row HVAC

Values

20

[0270]

Table 64

value	Description	remarks
0b	OFF	
1b	ON	

25

Remarks

30

[0271]

- N/A

35

3.4.3.9. Hvac_Temperature_1st_Left_Status

Status of set temperature of 1st row left

Values

40

[0272]

Table 65

value	Description	remarks
0	Lo	Max cold
60 to 85 [unit: °F]	Target temperature	
100	Hi	Max hot
FFh	Unknown	

45

50

Remarks

55

[0273]

- N/A

EP 3 858 700 A1

3.4.3.10. Hvac_Temperature_1st_Right_Status

Status of set temperature of 1st row right

5 Values

[0274]

Table 66

value	Description	remarks
0	Lo	Max cold
60 to 85 [unit: °F]	Target temperature	
100	Hi	Max hot
FFh	Unknown	

Remarks

20 **[0275]**

- N/A

25 3.4.3.11. Hvac_Temperature_2nd_Left_Status

Status of set temperature of 2nd row left

Values

30 **[0276]**

Table 67

value	Description	remarks
0	Lo	Max cold
60 to 85 [unit: °F]	Target temperature	
100	Hi	Max hot
FFh	Unknown	

Remarks

45 **[0277]**

- N/A

3.4.3.12. Hvac_Temperature_2nd_Right_Status

50 Status of set temperature of 2nd row right

Values

55 **[0278]**

EP 3 858 700 A1

Table 68

value	Description	remarks
0	Lo	Max cold
60 to 85 [unit: °F]	Target temperature	
100	Hi	Max hot
FFh	Unknown	

5

10

Remarks

[0279]

15

- N/A

3.4.3.13. Hvac_Fan_Level_1st_Row_Status

Status of set fan level of 1st row

20

Values

[0280]

25

Table 69

value	Description	remarks
0	OFF	
1 - 7	Fan Level	
8	Undefined	

30

Remarks

35

[0281]

- N/A

3.4.3.14. Hvac_Fan_Level_2nd_Row_Status

40

Status of set fan level of 2nd row

Values

45

[0282]

Table 70

value	Description	remarks
0	OFF	
1 - 7	Fan Level	
8	Undefined	

50

55

Remarks

[0283]

EP 3 858 700 A1

- N/A

3.4.3.15. Hvac_1st_Row_AirOutlet_Mode_Status

5 Status of mode of 1st row air outlet

Values

[0284]

10

Table 71

value	Description	remarks
000b	ALL OFF	when Auto mode is set
001b	UPPER	Air flows to the upper body
010b	U/F	Air flows to the upper body and feet
011b	FEET	Air flows to the feet.
100b	F/D	Air flows to the feet and the windshield defogger operates
101b	DEF	The windshield defogger operates
111b	Undefined	

15

20

25 Remarks

[0285]

- N/A

30

3.4.3.16. Hvac_2nd_Row_AirOutlet_Mode_Status

Status of mode of 2nd row air outlet

35 Values

[0286]

40

Table 72

value	Description	remarks
000b	ALL OFF	when Auto mode is set
001b	UPPER	Air flows to the upper body
010b	U/F	Air flows to the upper body and feet
011b	FEET	Air flows to the feet.
111b	Undefined	

45

50 Remarks

[0287]

- N/A

55

3.4.3.17. Hvac_Recirculate_Status

Status of set air recirculation mode

5 Values

[0288]

Table 73

10

value	Description	remarks
00	OFF	means that the air recirculation mode is OFF
01	ON	means that the air recirculation mode is ON

15

Remarks

[0289]

20

- N/A

3.4.3.18. Hvac_AC_Status

Status of set AC mode

25

Values

[0290]

30

Table 74

value	Description	remarks
00	OFF	means that the AC mode is OFF
01	ON	means that the AC mode is ON

35

Remarks

[0291]

40

- N/A

3.4.3.19. 1st_Right_Seat_Occupancy_Status

Seat occupancy status in 1st left seat

45

Values

[0292]

50

Table 75

value	Description	remarks
0	Not occupied	
1	Occupied	
2	Undecided	IG OFF or signal from sensor being lost
3	Failed	

55

EP 3 858 700 A1

Remarks

[0293] When there is luggage on the seat, this signal may be set to "Occupied".

5 3.4.3.20. 1st_Left_Seat_Belt_Status

Status of driver's seat belt buckle switch

Values

10

[0294]

Table 76

15

value	Description	remarks
0	Buckled	
1	Unbuckled	
2	Undetermined	
3	Fault of a switch	

20

Remarks

25

[0295]

- When Driver's seat belt buckle switch status signal is not set, [undetermined] is transmitted. It is checking to a person in charge, when using it. (Outputs "undetermined = 10" as an initial value.)
- The judgement result of buckling/unbuckling shall be transferred to CAN transmission buffer within 1.3s after IG_ON or before allowing firing, whichever is earlier.

30

3.4.3.21. 1st_Right_Seat_Belt_Status

Status of passenger's seat belt buckle switch

35

Values

[0296]

Table 77

40

value	Description	remarks
0	Buckled	
1	Unbuckled	
2	Undetermined	
3	Fault of a switch	

45

Remarks

50

[0297]

- When Passenger's seat belt buckle switch status signal is not set, [undetermined] is transmitted.

55

[0298] It is checking to a person in charge, when using it. (Outputs "undetermined = 10" as an initial value.)

- The judgement result of buckling/unbuckling shall be transferred to CAN transmission buffer within 1.3s after IG_ON

or before allowing firing, whichever is earlier.

3.4.3.22. 2nd_Left_Seat_Belt_Status

5 Seat belt buckle switch status in 2nd left seat

Values

10 **[0299]**

Table 78

value	Description	remarks
0	Buckled	
1	Unbuckled	
2	Undetermined	
3	<i>Reserved</i>	

15

20

Remarks

[0300]

- 25 • cannot detect sensor failure.

3.4.3.23. 2nd_Right_Seat_Belt_Status

Seat belt buckle switch status in 2nd right seat

30

Values

[0301]

Table 79

value	Description	remarks
0	Buckled	
1	Unbuckled	
2	Undetermined	
3	<i>Reserved</i>	

35

40

Remarks

45

[0302]

- cannot detect any failure.

50

3.5. APIs for Power control

3.5.1. Functions

[0303] T.B.D.

55

3.5.2. Inputs

[0304]

5

Table 80

Signal Name	Description	Redundancy
Power_Mode_Request	Command to control the power mode of the vehicle platform	N/A

10

3.5.2.1. Power_Mode_Request

Command to control the power mode of the vehicle platform

Values

15

[0305]

Table 81

20

Value	Description	Remarks
00	No request	
01	Sleep	means "Ready OFF"
02	Wake	means that VCIB turns ON
03	Resd	Reserved for data expansion
04	Resd	Reserved for data expansion
05	Resd	Reserved for data expansion
06	Driving Mode	means "Ready ON"

25

30

Remarks

35

[0306]

- Regarding "wake", let us share how to achieve this signal on the CAN. (See the other material) Basically, it is based on "ISO11989-2:2016". Also, this signal should not be a simple value. Anyway, please see the other material.
- This API will reject the next request for a certain time [4000 ms] after receiving a request.

40

[0307] The followings are the explanation of the three power modes, i.e. [Sleep] [Wake] [Driving Mode], which are controllable via API.

45

[Sleep]

[0308] Vehicle power off condition. In this mode, the high voltage battery does not supply power, and neither VCIB nor other VP ECUs are activated.

50

[Wake]

[0309] VCIB is awake by the low voltage battery. In this mode, ECUs other than VCIB are not awake except for some of the body electrical ECUs.

55

[Driving Mode]

[0310] Ready ON mode. In this mode, the high voltage battery supplies power to the whole VP and all the VP ECUs including VCIB are awake.

3.5.3. Outputs

[0311]

5

Table 82

Signal Name	Description	Redundancy
Power_Mode_Status	Status of the current power mode of the vehicle platform	N/A

10

3.5.3.1. Power_Mode_Status

Status of the current power mode of the vehicle platform

Values

15

[0312]

Table 83

20

Value	Description	Remarks
00	Resd	Reserved for same data align as mode request
01	Sleep	means "Ready OFF"
02	Wake	means that the only VCIB turns ON
03	Resd	Reserved for data expansion
04	Resd	Reserved for data expansion
05	Resd	Reserved for data expansion
06	Driving Mode	means "Ready ON"
07	unknown	means unhealthy situation would occur

25

30

Remarks

35

[0313]

- VCIB will transmit [Sleep] as Power_Mode_Status continuously for 3000 [ms] after executing the sleep sequence. And then, VCIB will be shutdown.

40

3.6. APIs for Safety

3.6.1. Functions

45

[0314] T.B.D.

3.6.2. Inputs

[0315]

50

Table 84

Signal Name	Description	Redundancy
T.B.D.		

55

3.6.3. Outputs

[0316]

5

Table 85

10

15

20

25

30

Signal Name	Description	Redundancy
Request for Operation	Request for operation according to status of vehicle platform toward ADS	
Passive_Safety_Functions_Triggered	Collision detection signal	-
Brake_System_Degradation_Modes	Indicates Brake_System_Degradation_Modes	Applied
Propulsive_System_Degradation_Modes	Indicates Propulsive_System_Degradation_Modes	N/A
Direction_Control_Degradation_Modes	Indicates Direction_Control_Degradation_Modes	N/A
WheelLock_Control_Degradation_Modes	Indicates WheelLock_Control_Degradation_Modes	Applied
Steering_System_Degradation_Modes	Indicates Steering_System_Degradation_Modes	Applied
Power_System_Degradation_Modes	Indicates Power_System_Degradation_Modes	Applied
Communication_Degradation_Modes		

3.6.3.1. Request for Operation

Request for operation according to status of vehicle platform toward ADS

35

Values

[0317]

40

Table 86

45

value	Description	remarks
0	No request	
1	Need maintenance	
2	Need back to garage	
3	Need stopping safely immediately	
Others	<i>Reserved</i>	

50

Remarks

[0318]

55

- T.B.D.

EP 3 858 700 A1

3.6.3.2. Passive_Safety_Functions_Triggered

Crash detection Signal

5 Values

[0319]

Table 87

10

value	Description	remarks
0	Normal	
5	Crash Detection (airbag)	
6	Crash Detection (high voltage circuit is shut off)	
7	Invalid Value	
Others	<i>Reserved</i>	

15

20 Remarks

[0320]

25

- When the event of crash detection is generated, the signal is transmitted 50 consecutive times every 100 [ms]. If the crash detection state changes before the signal transmission is completed, the high signal of priority is transmitted.

[0321] Priority: crash detection > normal

30

- Transmits for 5s regardless of ordinary response at crash, because the vehicle breakdown judgment system shall send a voltage OFF request for 5 s or less after crash in HV vehicle.

[0322] Transmission interval is 100 ms within fuel cutoff motion delay allowance time (1 s) so that data can be transmitted more than 5 times. In this case, an instantaneous power interruption is taken into account.

35

3.6.3.3. Brake_System_Degradation_Modes

Indicate Brake_System status

Values

40

[0323]

Table 88

45

value	Description	remarks
0	Normal	-
1	Failure detected	-

50 Remarks

[0324]

55

- When the Failure is detected, Safe stop is moved.

3.6.3.4. Propulsive_System_Degradation_Modes

Indicate Powertrain_System status

5 Values

[0325]

Table 89

10

value	Description	remarks
0	Normal	-
1	Failure detected	-

15

Remarks

[0326]

20

- When the Failure is detected, Safe stop is moved.

3.6.3.5. Direction_Control_Degradation_Modes

Indicate Direction_Control status

25

Values

[0327]

30

Table 90

value	Description	remarks
0	Normal	-
1	Failure detected	-

35

Remarks

[0328]

40

- When the Failure is detected, Safe stop is moved.
- When the Failure is detected, Propulsion Direction Command is refused.

45

3.6.3.6. WheelLock_Control_Degradation_Modes

Indicate WheelLock_Control status

Values

50

[0329]

Table 91

55

value	Description	remarks
0	Normal	-
1	Failure detected	-

Remarks

[0330]

- 5 • Primary indicates EPB status, and Secondary indicates SBW indicates.
- When the Failure is detected, Safe stop is moved.

3.6.3.7. Steering_System_Degradation_Modes

10

Indicate Steering_System status

Values

15

[0331]

Table 92

value	Description	remarks
0	Normal	-
1	Failure detected	-
2	Stationary steering not possible	Temporary lowering in performance due to high temperature or the like

20

25

Remarks

[0332]

- 30 • When the Failure are detected, Safe stop is moved.

3.6.3.8. Power_System_Degradation_Modes

[0333] [T.B.D]

35

3.6.3.9. Communication_Degradation_Modes

[0334] [T.B.D]

40

3.7. APIs for Security

3.7.1. Functions

[0335] T.B.D.

45

3.7.2. Inputs

[0336]

50

55

EP 3 858 700 A1

Table 93

Signal Name	Description	Redundancy
1 st_Left_Door_Lock_Command	Command to control each door lock of the vehicle platform Lock command supports only ALL Door Lock. Unlock command supports 1st-left Door unlock only, and ALL Door unlock. Trunk Door Lock/unlock command include in ALL Door lock/unlock	N/A
1 st_Right_Door_Lock_Command		N/A
2nd_Left_Door_Lock_Command		N/A
2nd_Right_Door_Lock_Command		N/A
Central_Vehicle_Lock_Exterior_Command	Command to control the all door lock of the vehicle platform	N/A

3.7.2.1. 1st_Left_Door_Lock_Command, 1st_Right_Door_Lock_Command, 2nd_Left_Door_Lock_Command, 2nd_Right_Door_Lock_Command

Command to control each door lock of the vehicle platform

Values

[0337]

Table 94

Value	Description	Remarks
0	No Request	
1	Lock (unsupported)	
2	Unlock	
3	reserved	

Remarks

[0338]

- Lock command supports only ALL Door Lock.
- Unlock command supports 1st-left Door unlock only, and ALL Door unlock.

3.7.2.2. Central_Vehicle_Lock_Exterior_Command

Command to control the all door lock of the vehicle platform.

Values

[0339]

Table 95

Value	Description	Remarks
0	No Request	
1	Lock (all)	include trunk lock
2	Unlock (all)	include trunk unlock

EP 3 858 700 A1

(continued)

Value	Description	Remarks
3	reserved	

5

Remarks

[0340]

10

- Lock command supports only ALL Door Lock.
- Unlock command supports 1st-left Door unlock only, and ALL Door unlock.

15

3.7.3. Outputs

[0341]

Table 96

20

Signal Name	Description	Redundancy
1 st_Left_Door_Lock_Status	Status of the current 1 st-left door lock mode of the vehicle platform	N/A
1 st_Right_Door_Lock_Status	Status of the current 1st-right door lock mode of the vehicle platform	N/A
25		
2nd_Left_Door_Lock_Status	Status of the current 2nd-left door lock mode of the vehicle platform	N/A
2nd_Right_Door_Lock_Status	Status of the current 2nd-right door lock mode of the vehicle platform	N/A
30		
Central_Vehicle_Exterior_Locked_Status	Status of the current all door lock mode of the vehicle platform	N/A
Vehicle_Alarm_Status	Status of the current vehicle alarm of the vehicle platform	N/A

35

3.7.3.1. 1st_Left_Door_Lock_Status

Status of the current 1st-left door lock mode of the vehicle platform

40

Values

[0342]

Table 97

45

value	Description	Remarks
0	reserved	
1	Locked	D seat locked
2	Unlocked	D seat unlocked
50		
3	invalid	

Remarks

55

[0343]

- cannot detect any failure.

EP 3 858 700 A1

3.7.3.2. 1st_Right_Door_Lock_Status

Status of the current 1st-right door lock mode of the vehicle platform

5 Values

[0344]

Table 98

10

value	Description	remarks
0	reserved	
1	Locked	P seat locked
2	Unlocked	P seat unlocked
3	invalid	

15

Remarks

20

[0345]

- cannot detect any failure.

25

3.7.3.3. 2nd_Left_Door_Lock_Status

Status of the current 2nd-left door lock mode of the vehicle platform

Values

30

[0346]

Table 99

35

Value	Description	remarks
0	Reserved	
1	Locked	RL seat locked
2	Unlocked	RL seat unlocked
3	invalid	

40

Remarks

45

[0347]

- cannot detect any failure.

3.7.3.4. 2nd_Right_Door_Lock_Status

50

Status of the current 2nd-right door lock mode of the vehicle platform

Values

55

[0348]

EP 3 858 700 A1

Table 100

value	Description	remarks
0	reserved	
1	Locked	RR seat locked
2	Unlocked	RR seat unlocked
3	invalid	

5

10

Remarks

[0349]

15

- cannot detect any failure.

3.7.3.5. Central_Vehicle_Exterior_Locked_Status

Status of the current all door lock mode of the vehicle platform

20

Values

[0350]

25

Table 101

value	Description	remarks
0	Reserved (unsupport)	
1	All Locked (unsupport)	
2	Anything Unlocked (unsupport)	
3	invalid (unsupport)	

30

35

Remarks

[0351]

40

- Vehicle platform refers to each door lock status,
 - in case any door unlocked, sends 0.
 - in case all door locked, sends 1.

45

3.7.3.6. Vehicle_Alarm_Status

Status of the current vehicle alarm of the vehicle platform

Values

50

[0352]

Table 102

Value	Description	remarks
0	Disarmed	Auto alarm system not active
1	Armed	Auto alarm system active · not on alert

55

EP 3 858 700 A1

(continued)

5

Value	Description	remarks
2	Active	Auto alarm system active · on alert
3	invalid	

Remarks

10

[0353] N/A

3.8. APIs for MaaS Service

3.8.1. Functions

15

[0354] T.B.D.

3.8.2. Inputs

20

[0355]

Table 103

25

Signal Name	Description	Redundancy
T.B.D.		

3.8.3. Outputs

30

[0356]

Table 104

35

Signal Name	Description	Redundancy
T.B.D.		

[Example 2]

40

[0357] Toyota's MaaS Vehicle Platform
Architecture Specification
[Standard Edition #0.1]

History of Revision

45

[0358]

Table 105

50

Date of Revision	ver.	Summary of Revision	Reviser
2019/11/04	0.1	Creating a new material	MaaS Business Div.

Index

55

[0359]

1. General Concept 4

	1.1. Purpose of this Specification	4
	1.2. Target Vehicle Type	4
	1.3. Target Electronic Platform	4
5	1.4. Definition of Term	4
	1.5. Precaution for Handling	4
	1.6. Overall Structure of MaaS	4
	1.7. Adopted Development Process	6
	1.8. ODD (Operational Design Domain)	6
10	2. Safety Concept	7
	2.1. Outline	7
	2.2. Hazard analysis and risk assessment	7
15	2.3. Allocation of safety requirements	8
	2.4. Redundancy	8
	3. Security Concept	10
	3.1. Outline	10
20	3.2. Assumed Risks	10
	3.3. Countermeasure for the risks	10
	3.3.1. The countermeasure for a remote attack	11
25	3.3.2. The countermeasure for a modification	11
	3.4. Addressing Held Data Information	11
	3.5. Addressing Vulnerability	11
	3.6. Contract with Operation Entity	11
30	4. System Architecture	12
	4.1. Outline	12
	4.2. Physical LAN architecture (in-Vehicle)	12
35	4.3. Power Supply Structure	14
	5. Function Allocation	15
	5.1. in a healthy situation	15
40	5.2. in a single failure	16
	6. Data Collection	18
	6.1. At event	18
45	6.2. Constantly	18
	1. General Concept	
	1.1. Purpose of this Specification	
50	[0360] This document is an architecture specification of Toyota's MaaS Vehicle Platform and contains the outline of system in vehicle level.	
	1.2. Target Vehicle Type	
55	[0361] This specification is applied to the Toyota vehicles with the electronic platform called 19ePF [ver.1 and ver.2].	
	[0362] The representative vehicle with 19ePF is shown as follows.	
	[0363] e-Palette, Sienna, RAV4, and so on.	

1.3. Definition of Term

[0364]

Table 106

Term	Definition
ADS	Autonomous Driving System.
ADK	Autonomous Driving Kit
VP	Vehicle Platform.
VCIB	Vehicle Control Interface Box. This is an ECU for the interface and the signal converter between ADS and Toyota VP's sub systems.

1.4. Precaution for Handling

[0365] This is an early draft of the document.

[0366] All the contents are subject to change. Such changes are notified to the users. Please note that some parts are still T.B.D. will be updated in the future.

2. Architectural Concept

2.1. Overall Structure of MaaS

[0367] The overall structure of MaaS with the target vehicle is shown (Fig. 15).

[0368] Vehicle control technology is being used as an interface for technology providers.

[0369] Technology providers can receive open API such as vehicle state and vehicle control, necessary for development of automated driving systems.

2.2. Outline of system architecture on the vehicle

[0370] The system architecture on the vehicle as a premise is shown (Fig. 16).

[0371] The target vehicle of this document will adopt the physical architecture of using CAN for the bus between ADS and VCIB. In order to realize each API in this document, the CAN frames and the bit assignments are shown in the form of "bit assignment chart" as a separate document.

2.3. Outline of power supply architecture on the vehicle

[0372] The power supply architecture as a premise is shown as follows (Fig. 17).

[0373] The blue colored parts are provided from an ADS provider. And the orange colored parts are provided from the VP.

[0374] The power structure for ADS is isolate from the power structure for VP. Also, the ADS provider should install a redundant power structure isolated from the VP.

3. Safety Concept

3.1. Overall safety concept

[0375] The basic safety concept is shown as follows.

[0376] The strategy of bringing the vehicle to a safe stop when a failure occurs is shown as follows (Fig. 18).

1. After occurrence of a failure, the entire vehicle executes "detecting a failure" and "correcting an impact of failure" and then achieves the safety state 1.

2. Obeying the instructions from the ADS, the entire vehicle stops in a safe space at a safe speed (assumed less than 0.2G).

However, depending on a situation, the entire vehicle should happen a deceleration more than the above deceleration

if needed.

3. After stopping, in order to prevent slipping down, the entire vehicle achieves the safety state 2 by activating the immobilization system.

5

Table 107

category	content
<p>10</p> <ul style="list-style-type: none"> ▪ Precondition 	<ul style="list-style-type: none"> - Only one single failure at a time across the entire integrated vehicle. (Multiple failures are not covered) - After the initial single failure, no other failure is anticipated in the duration in which the functionality is maintained.
<p>15</p> <ul style="list-style-type: none"> ▪ Responsibility for the vehicle platform until safety state 2 	<ul style="list-style-type: none"> - In case of a single failure, the integrated vehicle should maintain the necessary functionality for safety stop. - The functionality should be maintained for 15 (fifteen) seconds.
<p>20</p> <ul style="list-style-type: none"> ▪ Basic Responsibility Sharing 	<p>[For ADS] The ADS should create the driving plan, and should indicate vehicle control values to the VP.</p> <p>[For Toyota vehicle platform] The Toyota VP should control each system of the VP based on indications from the ADS.</p>

25

[0377] See the separated document called "Fault Management" regarding notifiable single failure and expected behavior for the ADS.

3.2. Redundancy

30

[0378] The redundant functionalities with Toyota's MaaS vehicle are shown.

[0379] Toyota's Vehicle Platform has the following redundant functionalities to meet the safety goals led from the functional safety analysis.

35

Redundant Braking

[0380] Any single failure on the Braking System doesn't cause loss of braking functionality. However, depending on where the failure occurred, the capability left might not be equivalent to the primary system's capability. In this case, the braking system is designed to prevent the capability from becoming 0.3 G or less.

40

Redundant Steering

[0381] Any single failure on the Steering System doesn't cause loss of steering functionality. However, depending on where the failure occurred, the capability left might not be equivalent to the primary system's capability. In this case, the steering system is designed to prevent the capability from becoming 0.3 G or less.

45

Redundant Immobilization

[0382] Toyota's MaaS vehicle has 2 immobilization systems, i.e. P lock and EPB. Therefore, any single failure of immobilization system doesn't cause loss of the immobilization capability. However, in the case of failure, maximum stationary slope angle is less steep than when the systems are healthy.

50

Redundant Power

[0383] Any single failure on the Power Supply System doesn't cause loss of power supply functionality. However, in case of the primary power failure, the secondary power supply system keeps supplying power to the limited systems for a certain time.

55

Redundant Communication

5 **[0384]** Any single failure on the Communication System doesn't cause loss of all the communication functionality. System which needs redundancy has physical redundant communication lines. For more detail information, see the chapter "Physical LAN architecture (in-Vehicle)".

4. Security Concept

10 4.1. Outline

[0385] Regarding security, Toyota's MaaS vehicle adopts the security document issued by Toyota as an upper document.

15 4.2. Assumed Risks

[0386] The entire risk includes not only the risks assumed on the base e-PF but also the risks assumed for the Autono-MaaS vehicle.

20 The entire risk is shown as follows.

[Remote Attack]

[0387]

25 - To vehicle

- Spoofing the center
- ECU Software Alternation
- DoS Attack
- Sniffing

35 - From vehicle

- Spoofing the other vehicle
- Software Alternation for a center or an ECU on the other vehicle
- DoS Attack to a center or other vehicle
- Uploading illegal data

45 [Modification]

[0388]

- Illegal Reprogramming
- Setting up an illegal ADK
- Installation of an unauthenticated product by a customer

4.3. Countermeasure for the risks

55 **[0389]** The countermeasure of the above assumed risks is shown as follows.

4.3.1. The countermeasure for a remote attack

[0390] The countermeasure for a remote attack is shown as follows.

5 [0391] Since the autonomous driving kit communicates with the center of the operation entity, end-to-end security should be ensured. Since a function to provide a travel control instruction is performed, multi-layered protection in the autonomous driving kit is required. Use a secure microcomputer or a security chip in the autonomous driving kit and provide sufficient security measures as the first layer against access from the outside. Use another secure microcomputer and another security chip to provide security as the second layer. (Multi-layered protection in the autonomous driving kit including protection as the first layer to prevent direct entry from the outside and protection as the second layer as the layer below the former)

10

4.3.2. The countermeasure for a modification

[0392] The countermeasure for a modification is shown as follows.

15 [0393] For measures against a counterfeit autonomous driving kit, device authentication and message authentication are carried out. In storing a key, measures against tampering should be provided and a key set is changed for each pair of a vehicle and an autonomous driving kit. Alternatively, the contract should stipulate that the operation entity exercise sufficient management so as not to allow attachment of an unauthorized kit. For measures against attachment of an unauthorized product by an Autono-MaaS vehicle user, the contract should stipulate that the operation entity exercise management not to allow attachment of an unauthorized kit.

20

[0394] In application to actual vehicles, conduct credible threat analysis together, and measures for addressing most recent vulnerability of the autonomous driving kit at the time of LO should be completed.

5. Function Allocation

25

5.1. in a healthy situation

[0395] The allocation of representative functionalities is shown as below (Fig. 19).

30 [Function allocation]

[0396]

Table 108

Function category	Function name	Related to #	remarks
Planning	Plan for driving path	0	
	Calculating control indications	0	e.g. longitudinal G
Overall	API Pub/Sub	1	One system with redundancy
Security	Autonomy Driving Kit Authentication	1	One system with redundancy
	Message Authentication	1	One system with redundancy
	Door locking control	8	
Long itudinal/ Lateral	Motion control	2 (Primary), 3 (Secondary)	
	Propulsion control	4	
	Braking control	2,3	Two units controlled according to deceleration requirement
	Steering control	5	One system with redundancy
	Immobilization control	2 (EPB), 6 (P Lock)	
	Shift control	6	

(continued)

Function category	Function name	Related to #	remarks
Power supply	Secondary battery control	7	
	Vehicle power control	10	For more information, see the API specification.
Access/Comfort	Body control	8	Turn signal, Headlight, Window, etc.
	HVAC control	9	
Data	Data logging (at event)	1	
	Data logging (constantly)	1	

5.2. in a single failure

[0397] See the separated document called "Fault Management" regarding notifiable single failure and expected behavior for the ADS.

[0398] Though embodiments of the present disclosure have been described above, it should be understood that the embodiments disclosed herein are illustrative and non-restrictive in every respect. The scope of the present invention is defined by the terms of the claims and is intended to include any modifications within the scope and meaning equivalent to the terms of the claims.

Claims

1. A vehicle (10) on which an autonomous driving system (200) is mountable, the vehicle comprising:

a vehicle platform (120) configured to control the vehicle in accordance with an instruction from the autonomous driving system; and
 a vehicle control interface (110) configured to interface between the vehicle platform and the autonomous driving system, wherein
 the vehicle control interface is configured to provide, to the autonomous driving system, a signal indicating a moving direction of the vehicle that is determined based on a majority rule in connection with rotation directions of wheels.

2. The vehicle according to claim 1, wherein
 the vehicle control interface is configured to provide, to the autonomous driving system, a signal indicating "Standstill" as the signal indicating the moving direction of the vehicle, when all wheel speed values are zero during a certain time period.

3. The vehicle according to claim 1 or 2, wherein
 the vehicle control interface is configured to provides a signal indicating "Forward" to the autonomous driving system when the number of wheels rotating in a forward rotation direction is larger than the number of wheels rotating in a reverse rotation direction, and
 the vehicle control interface is configured to provide a signal indicating "Reverse" to the autonomous driving system when the number of wheels rotating in the reverse rotation direction is larger than the number of wheels rotating in the forward rotation direction.

4. The vehicle according to any one of claims 1 to 3, wherein
 the vehicle control interface is configured to provide information indicating "Undefined" to the autonomous driving system when the number of wheels rotating in a forward rotation direction is equal to the number of wheels rotating in a reverse rotation direction.

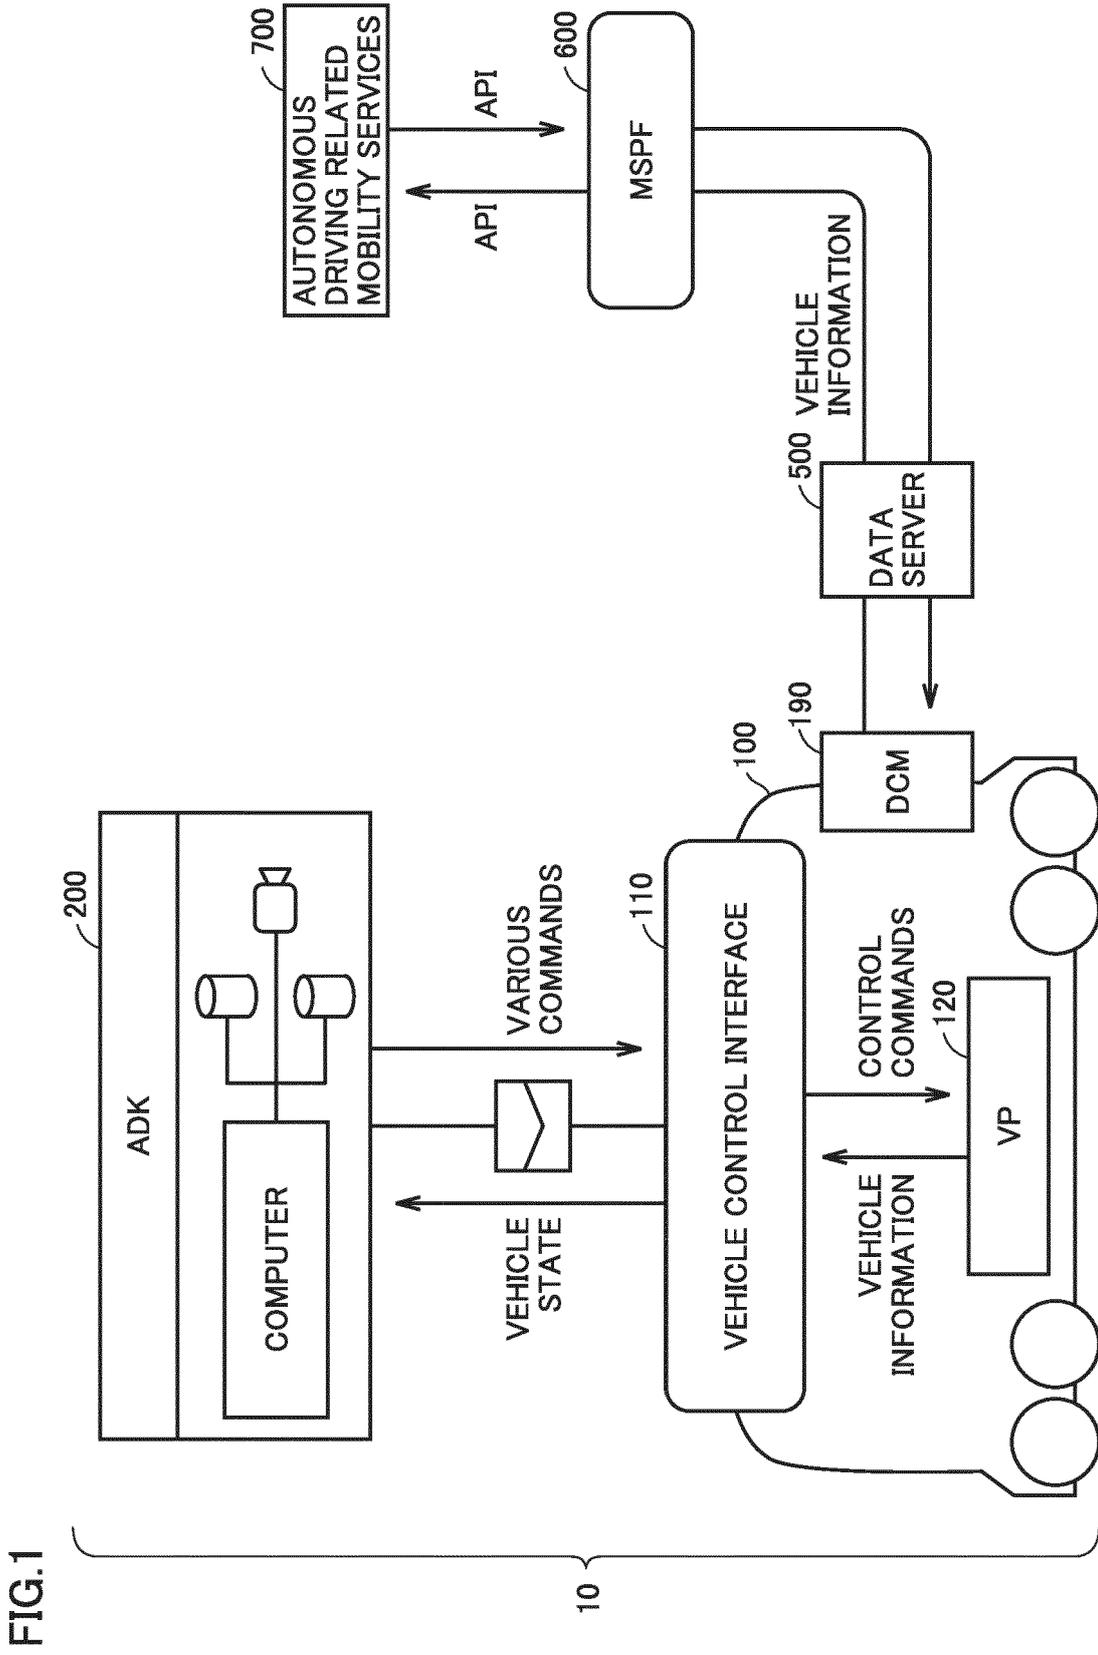


FIG.2

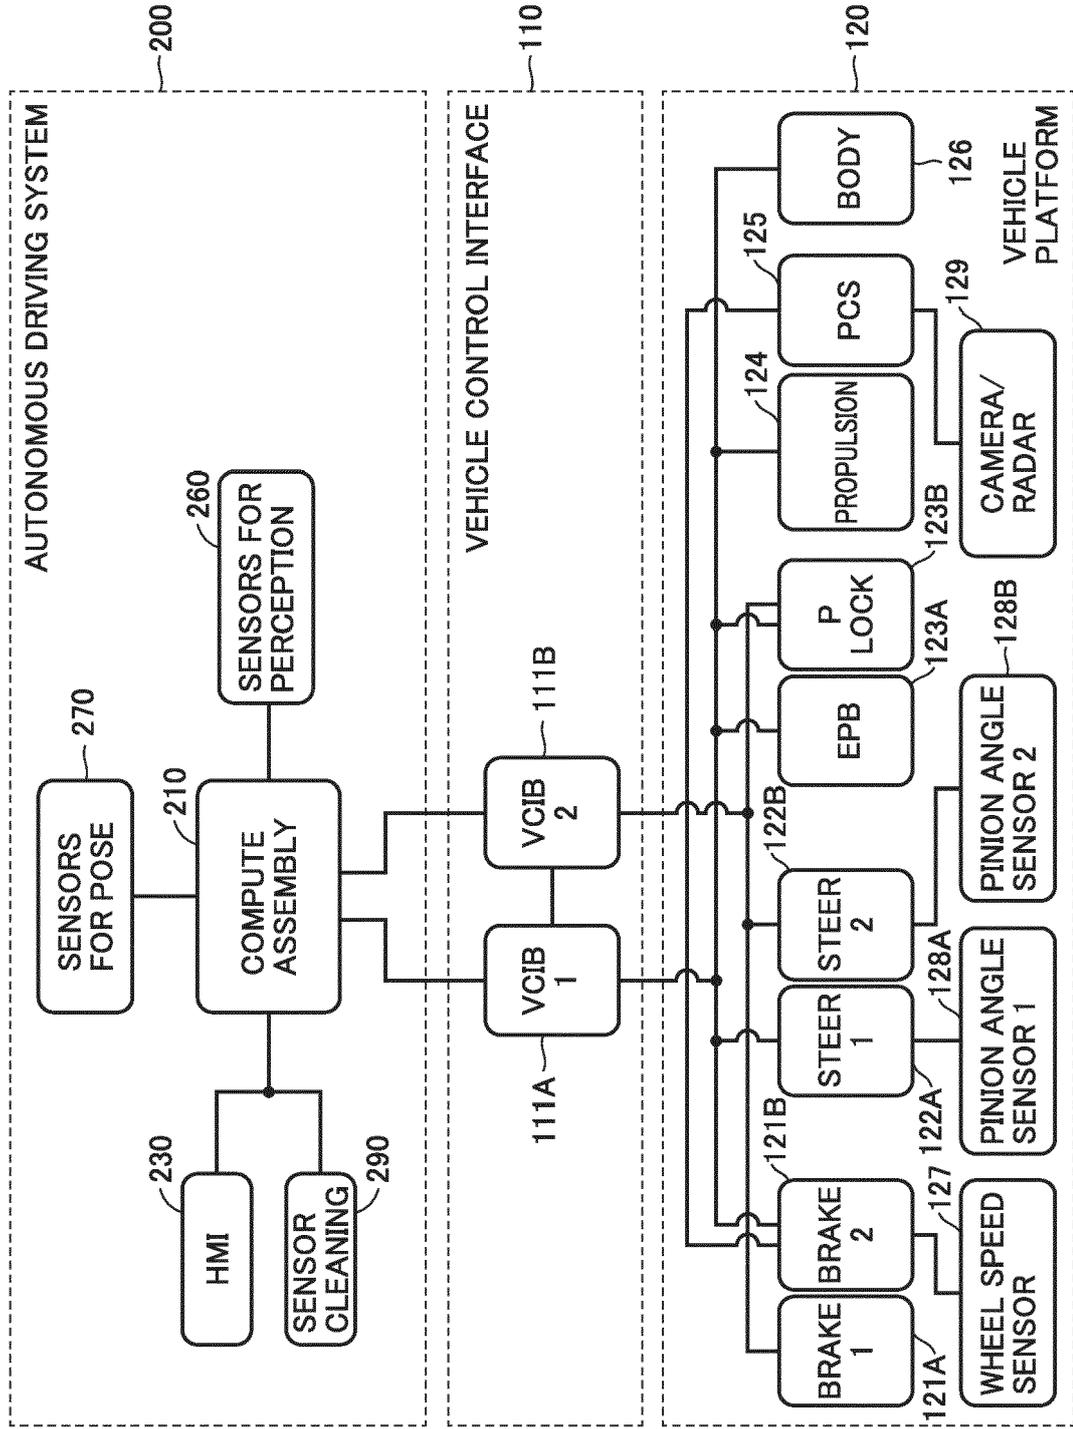


FIG.3

value	Description	remarks
0	Forward	
1	Reverse	
2	Standstill	
3	Undefined	

FIG.4

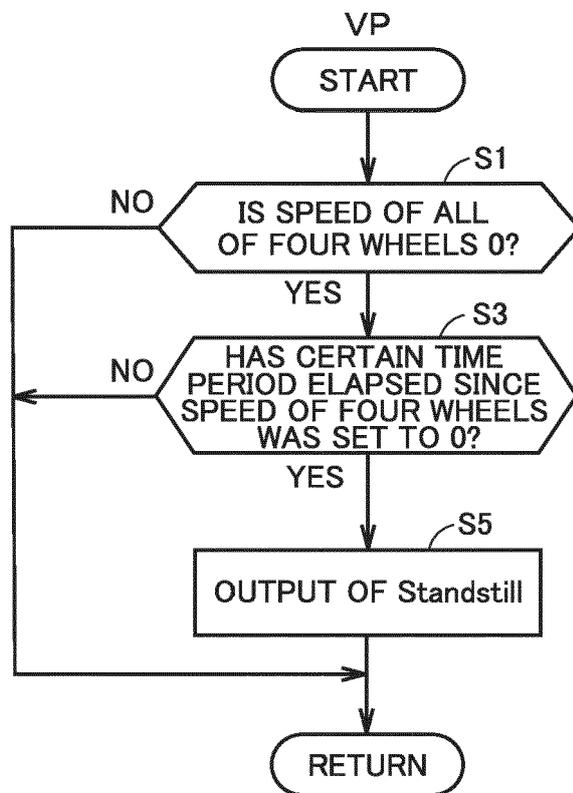


FIG.5

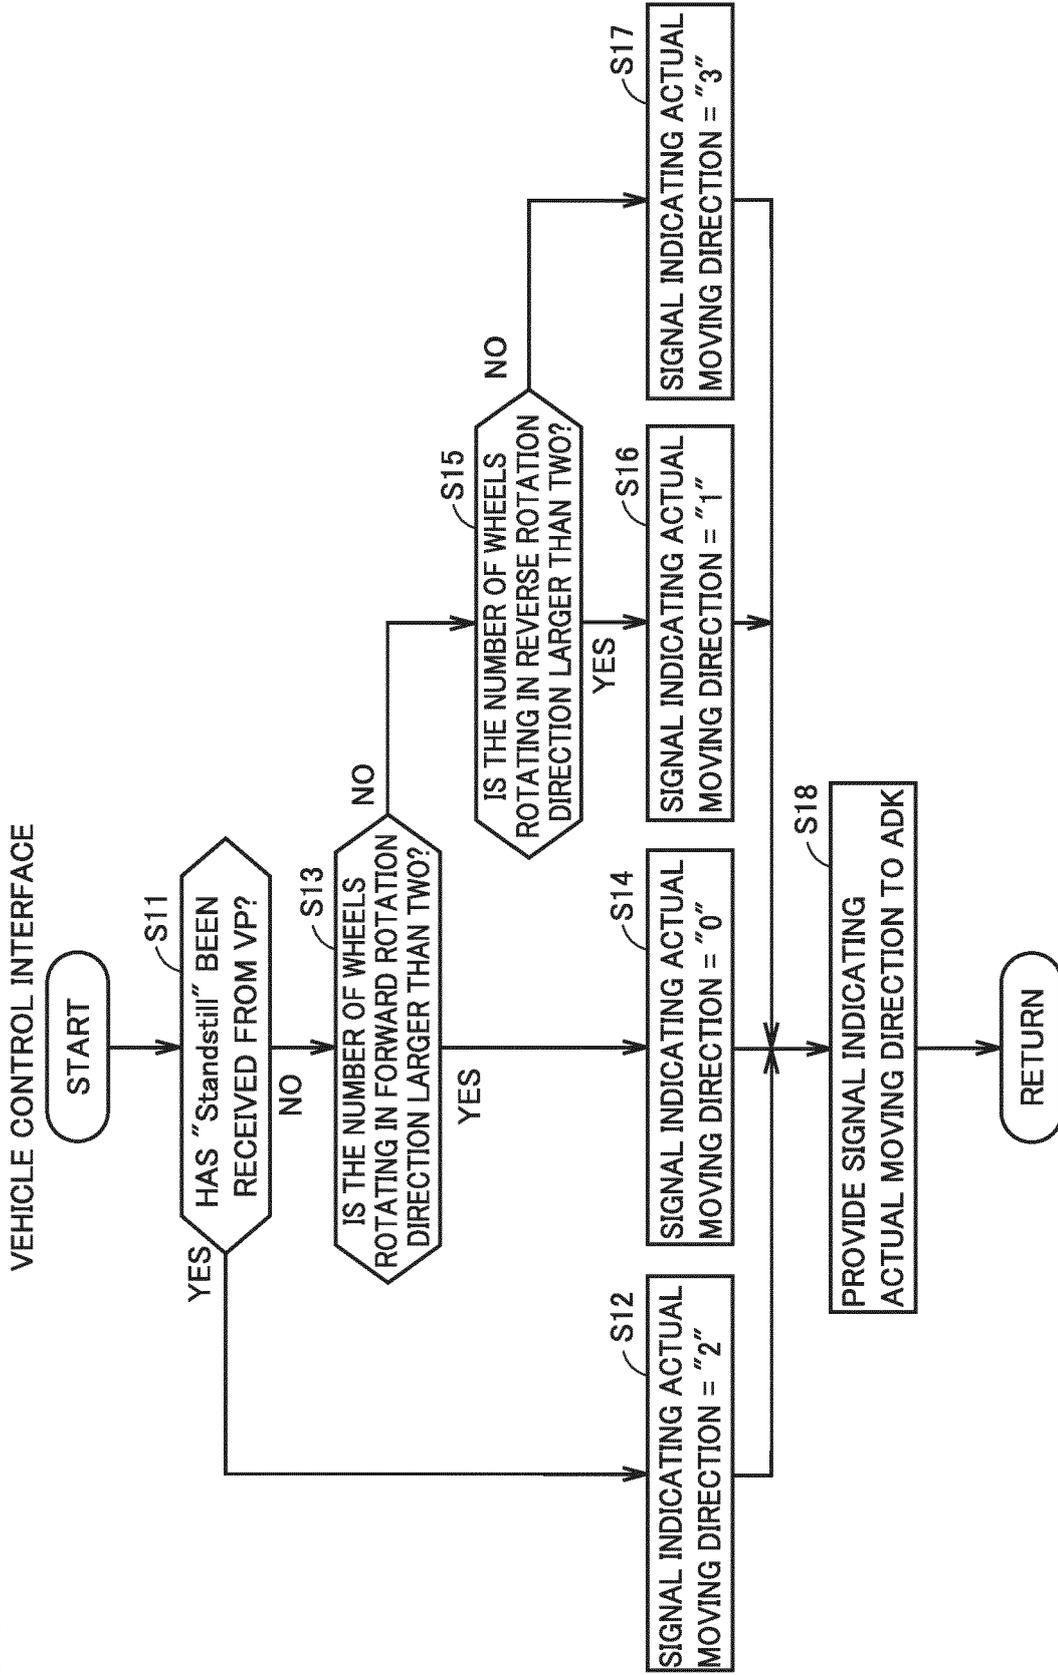


FIG.6

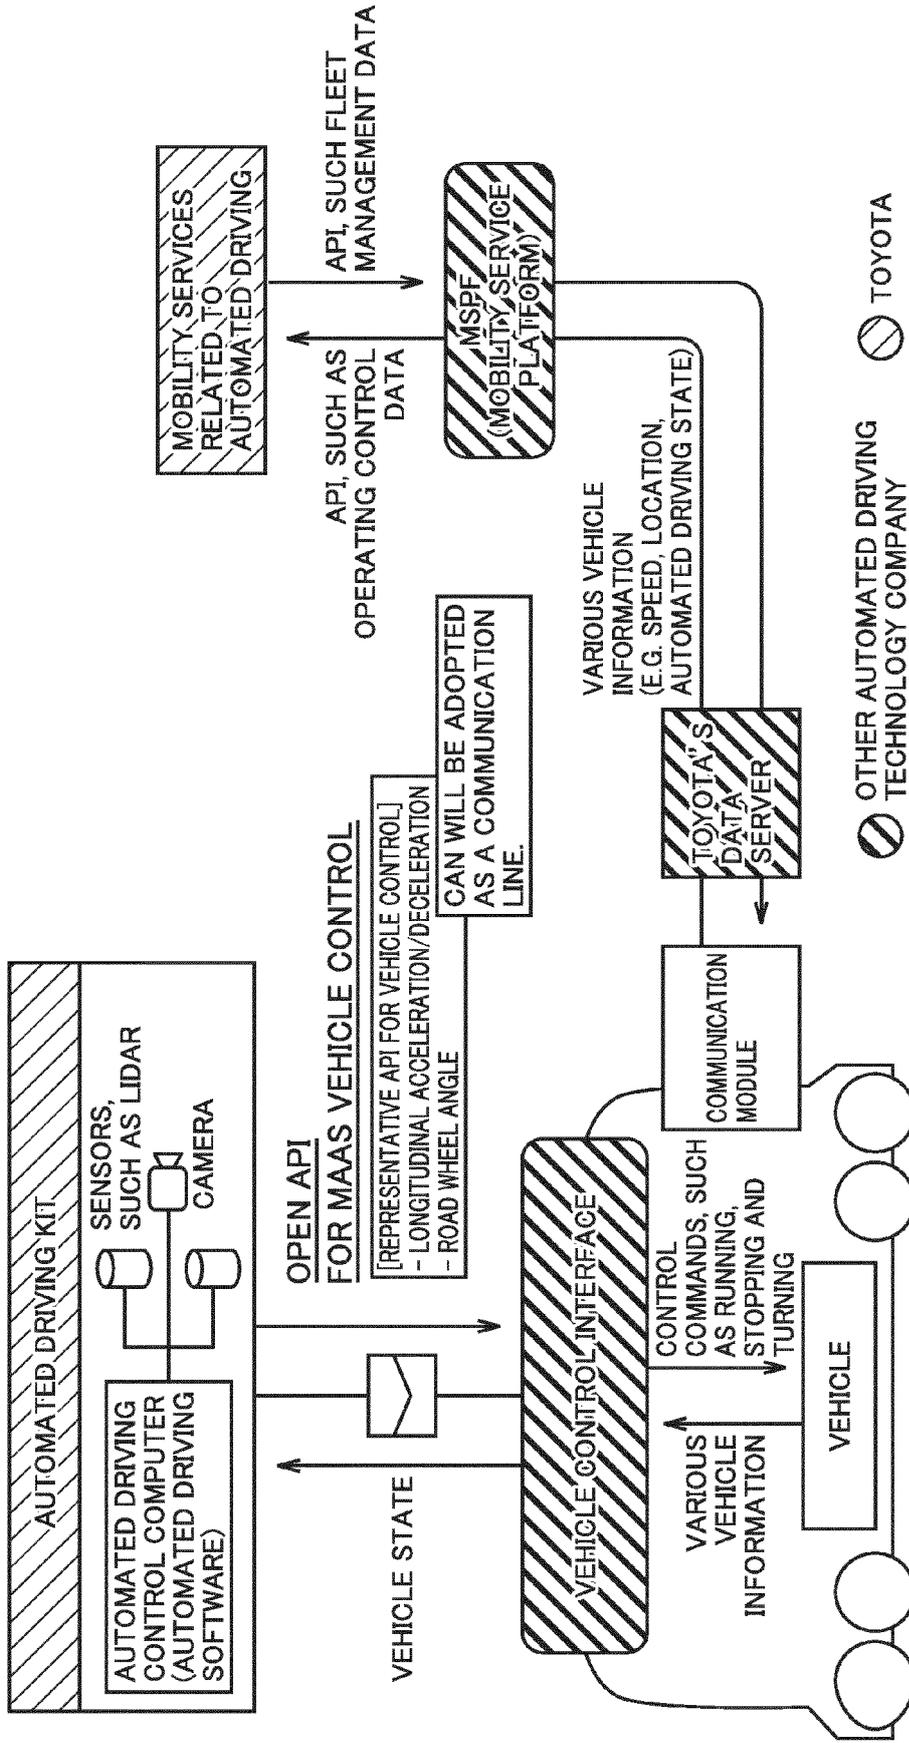


FIG.7

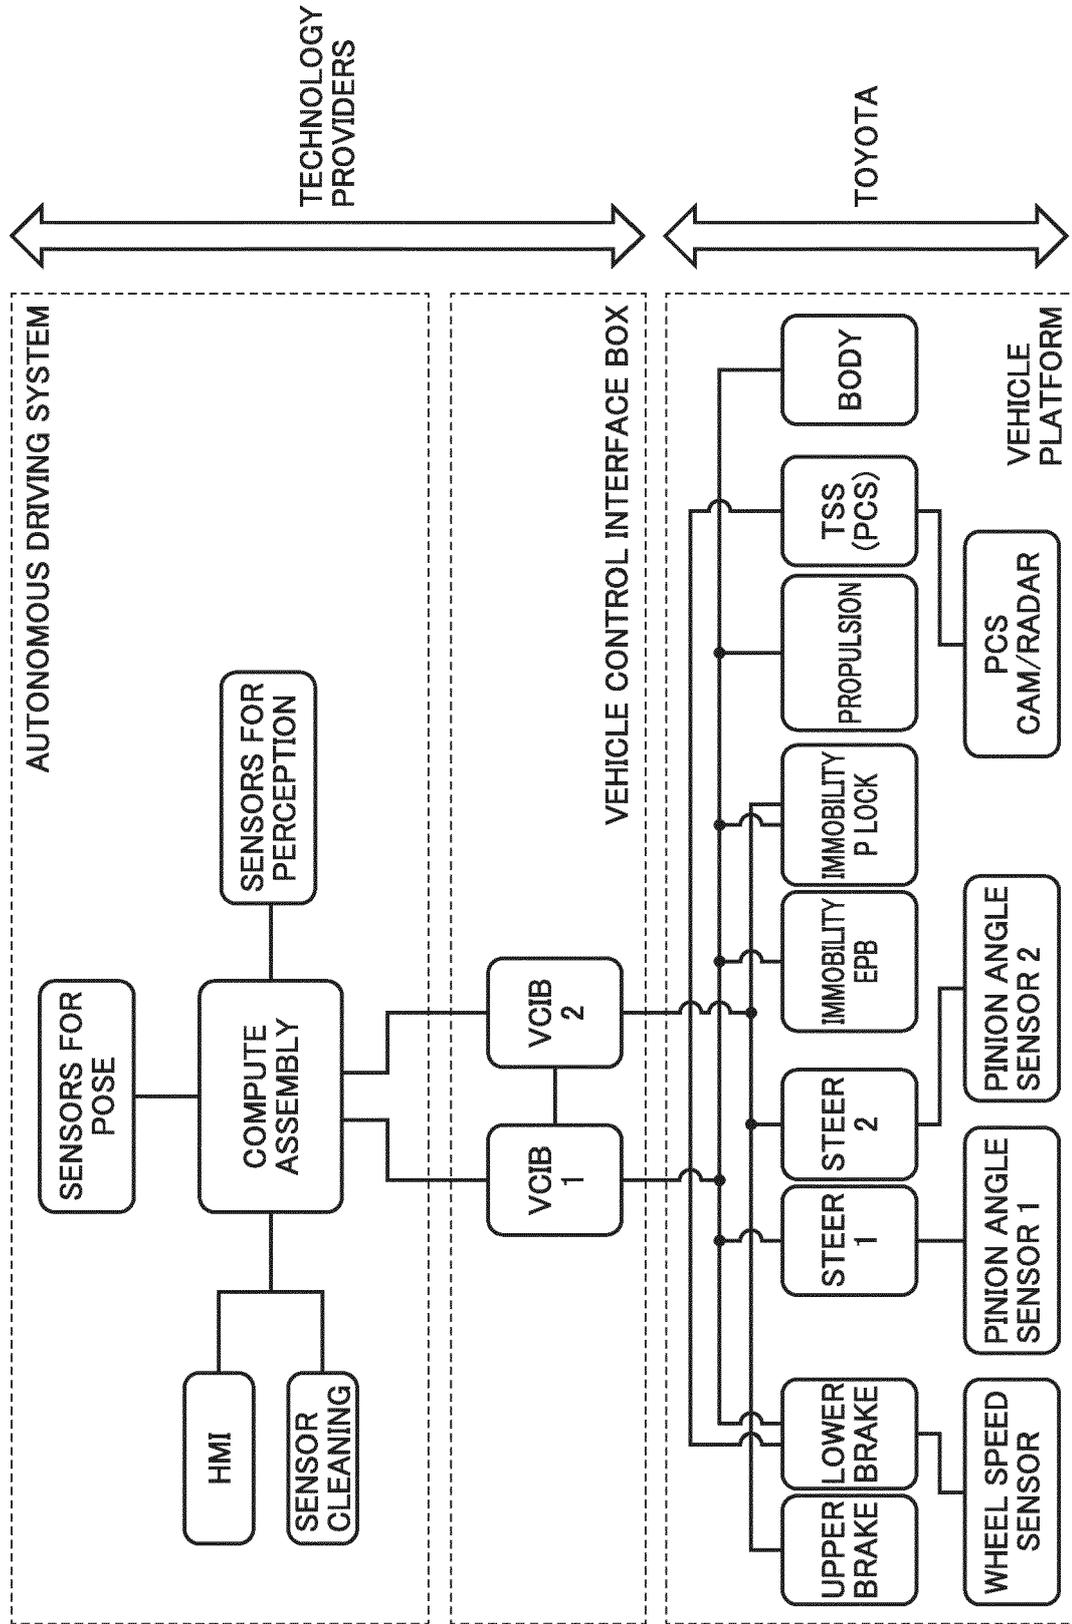


FIG.8

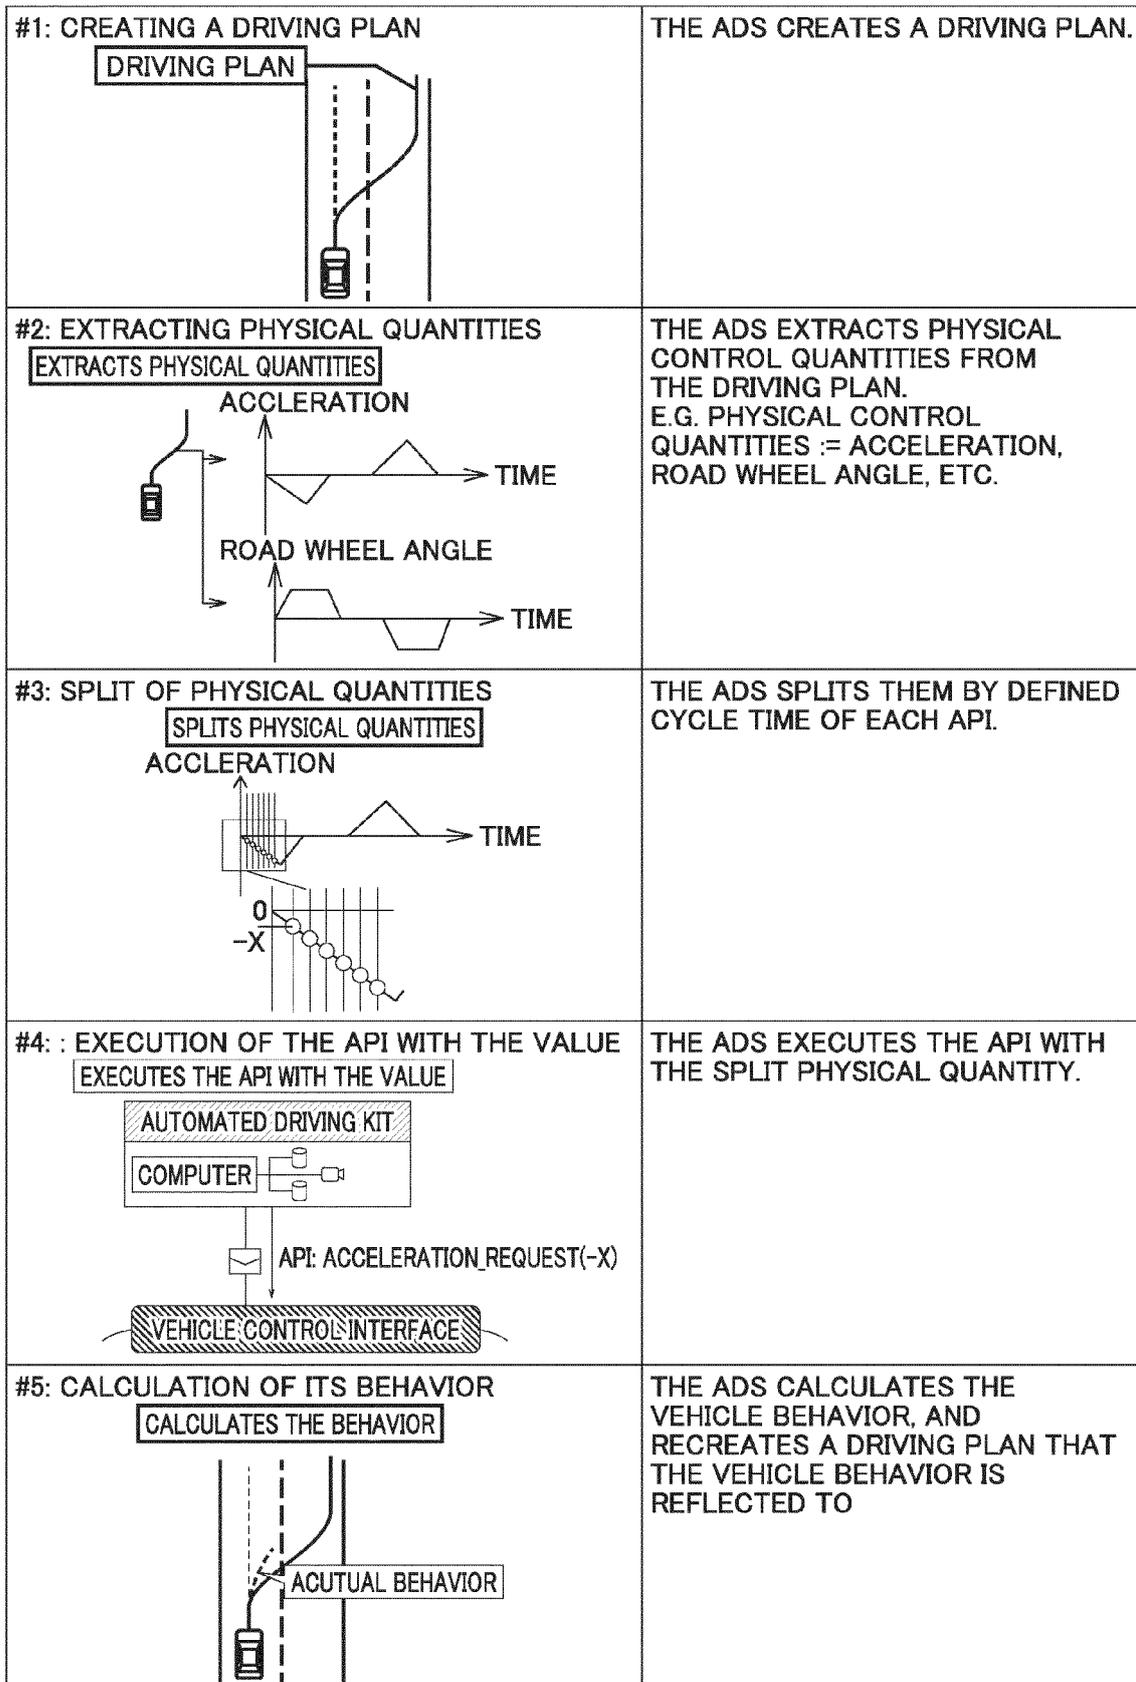


FIG.9

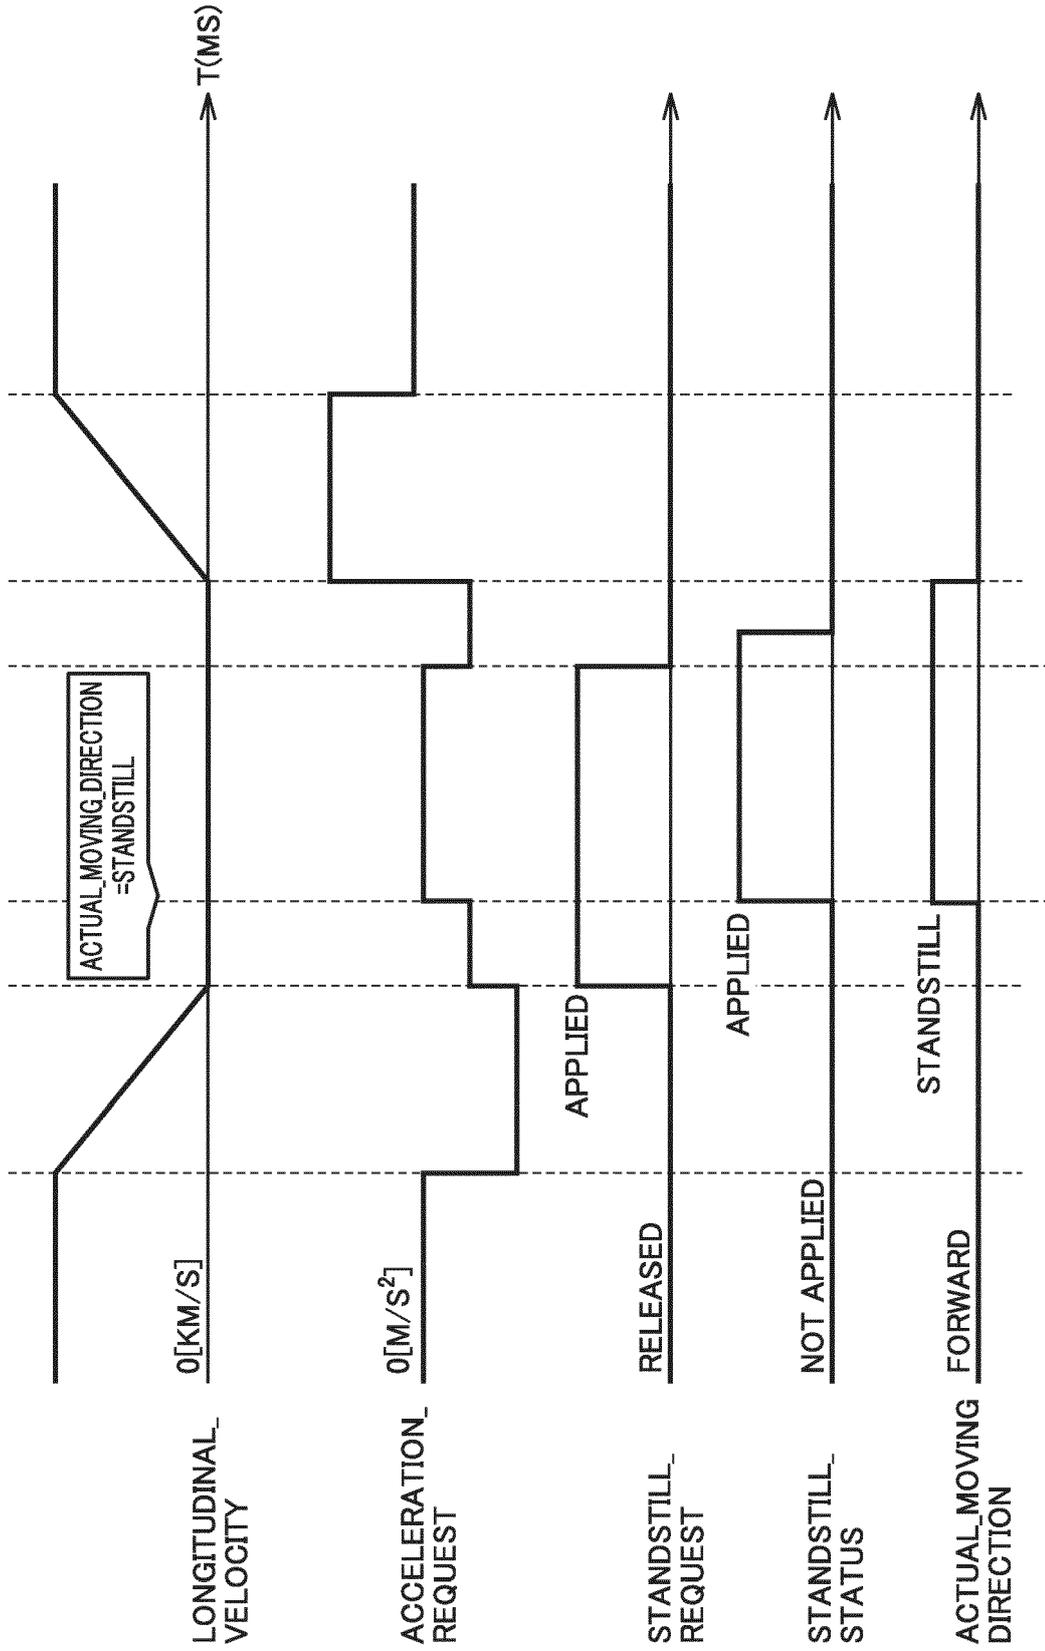


FIG.10

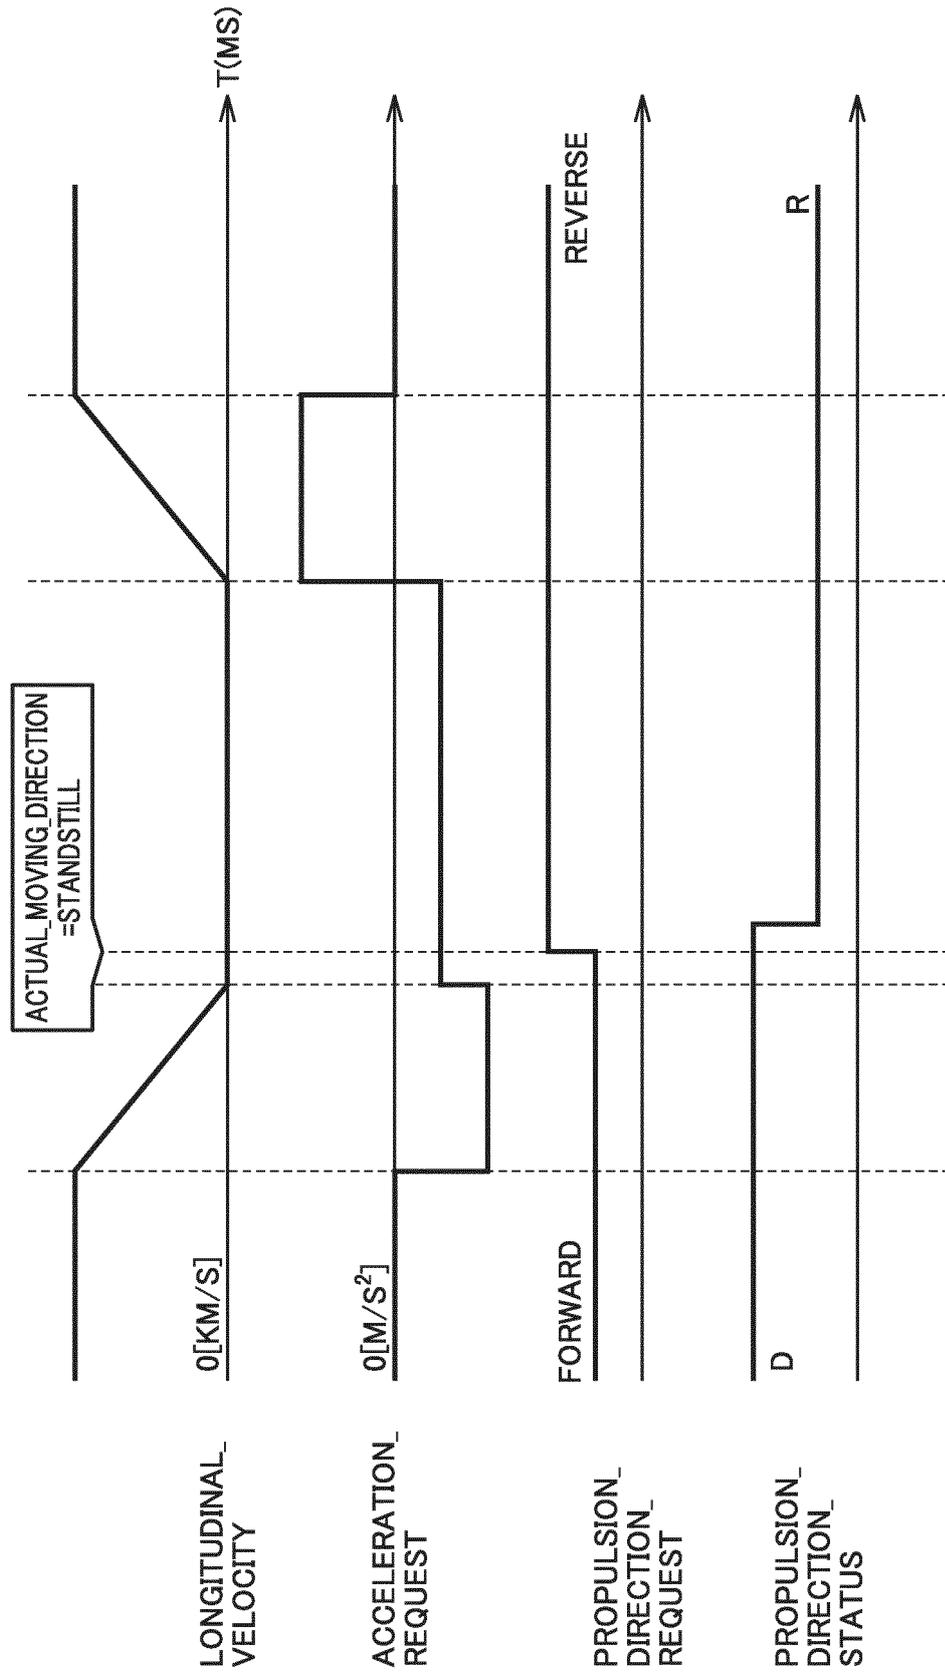
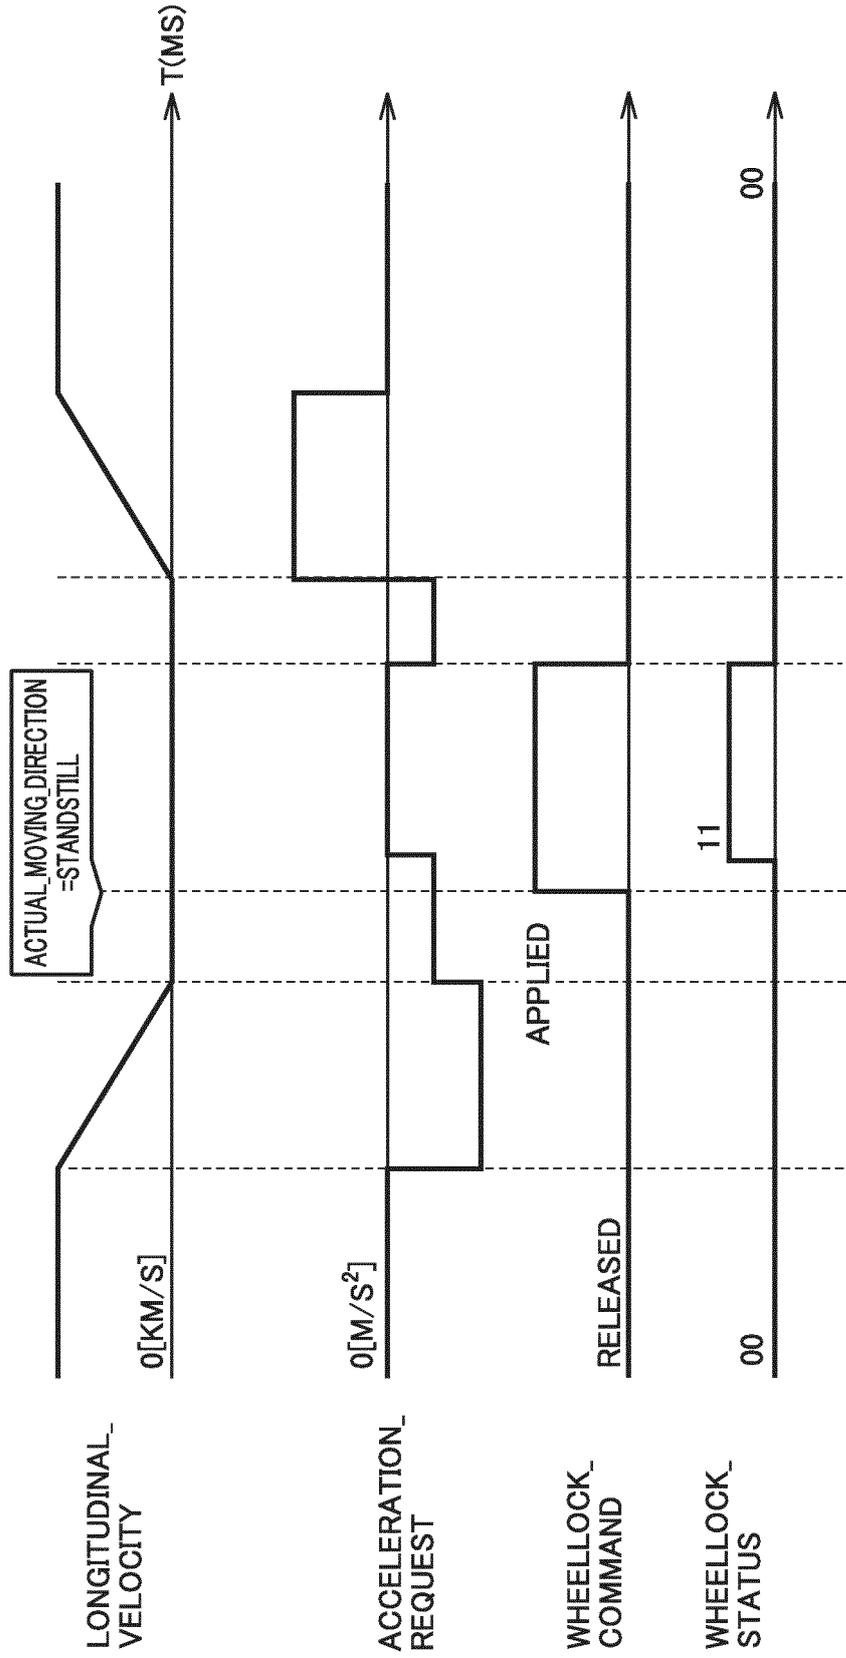


FIG.11



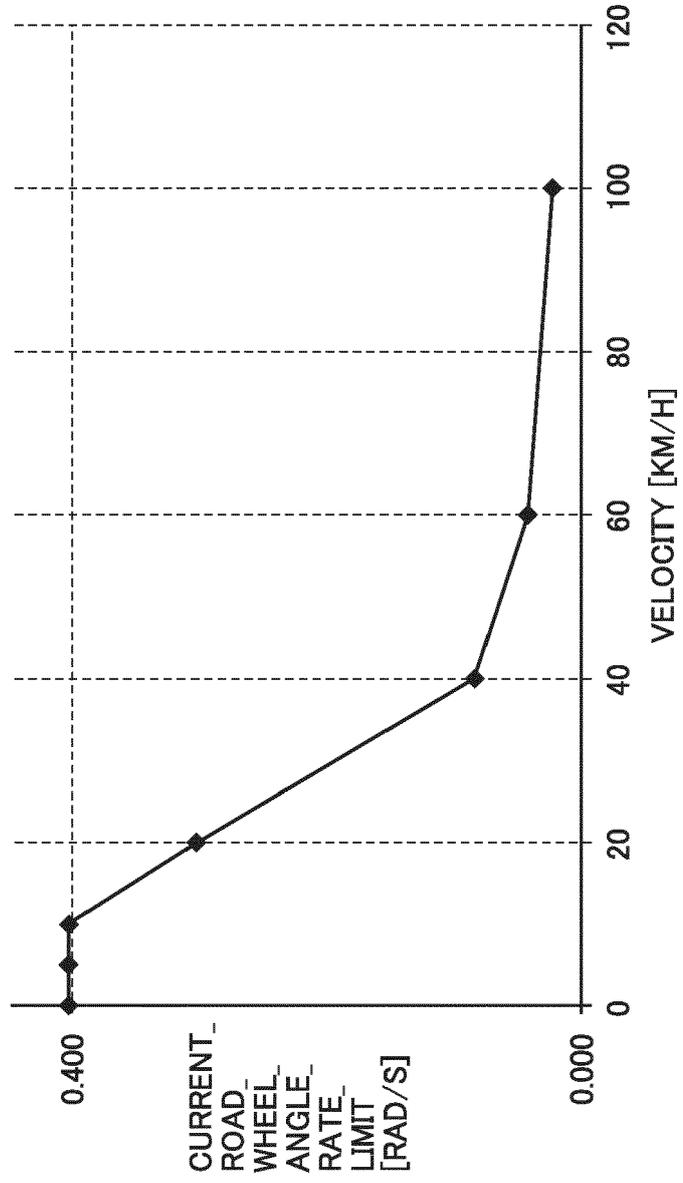


FIG.12

FIG.13

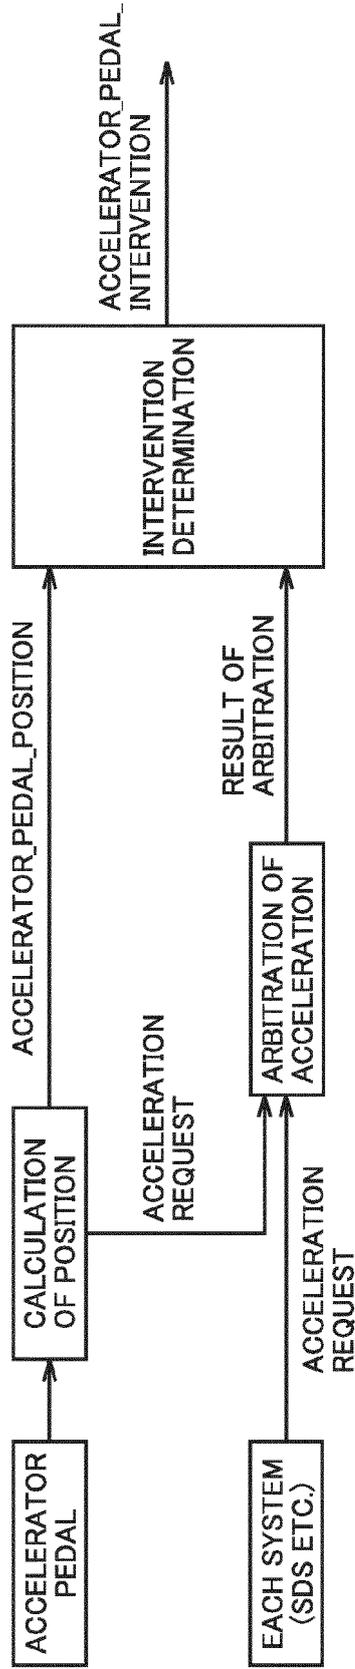


FIG.14

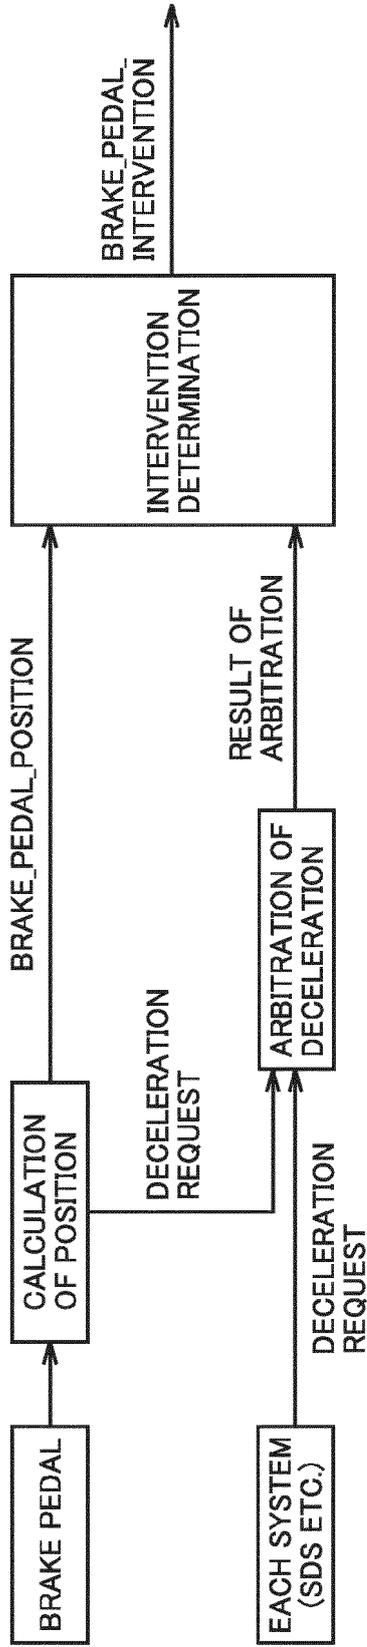


FIG.15

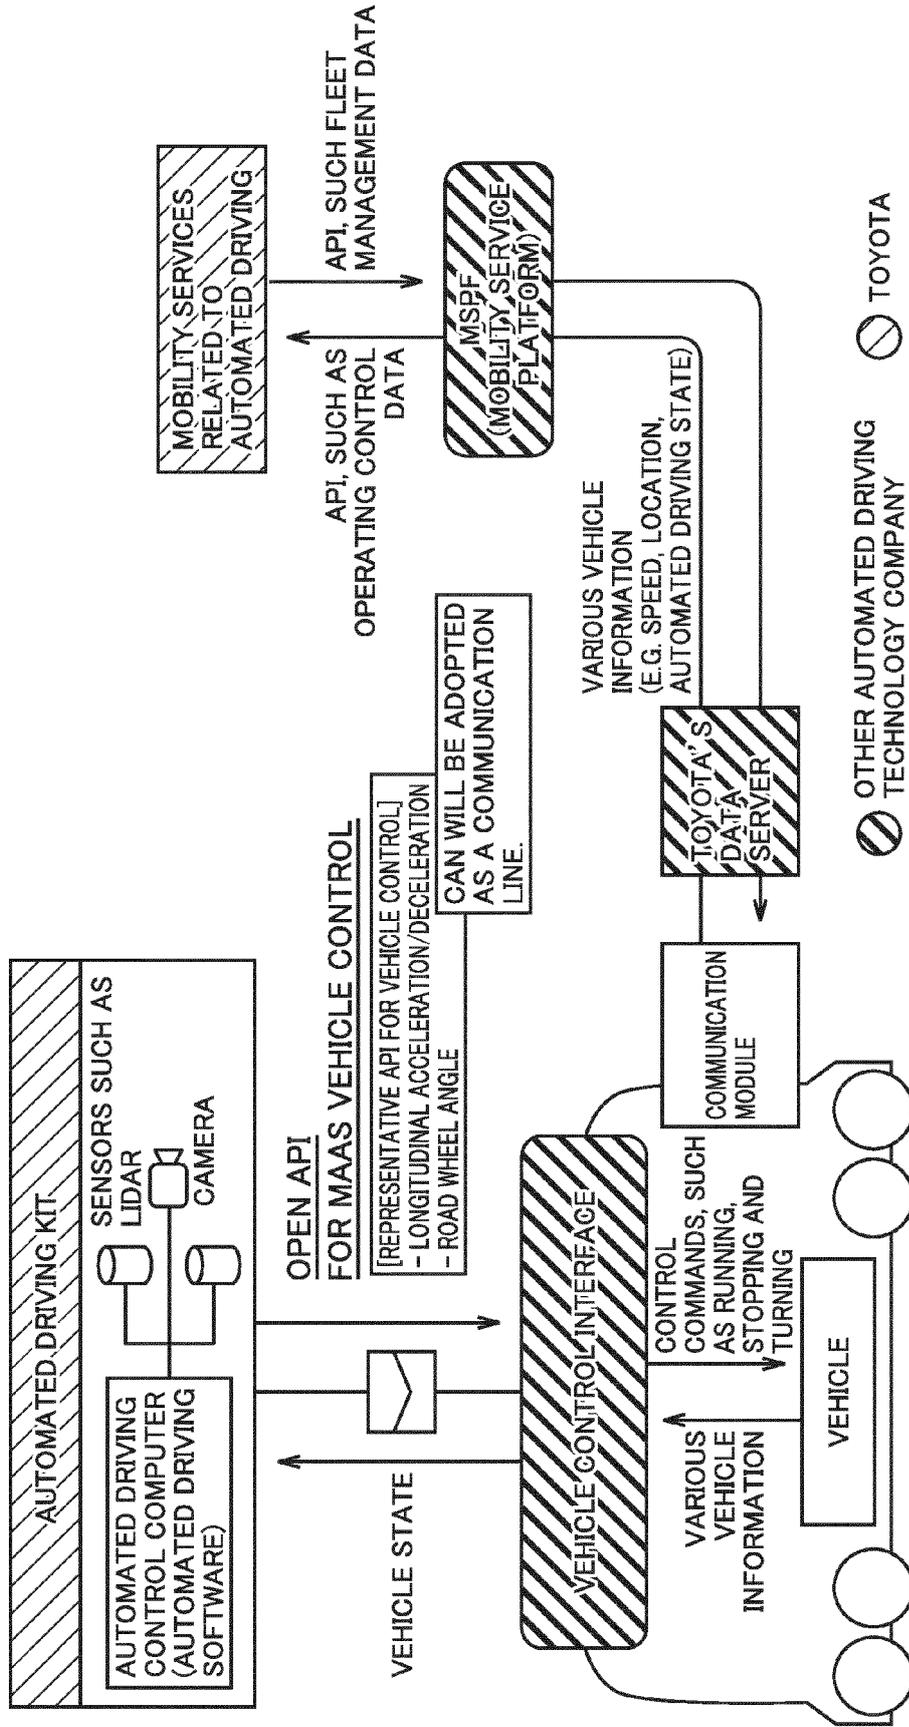


FIG.16

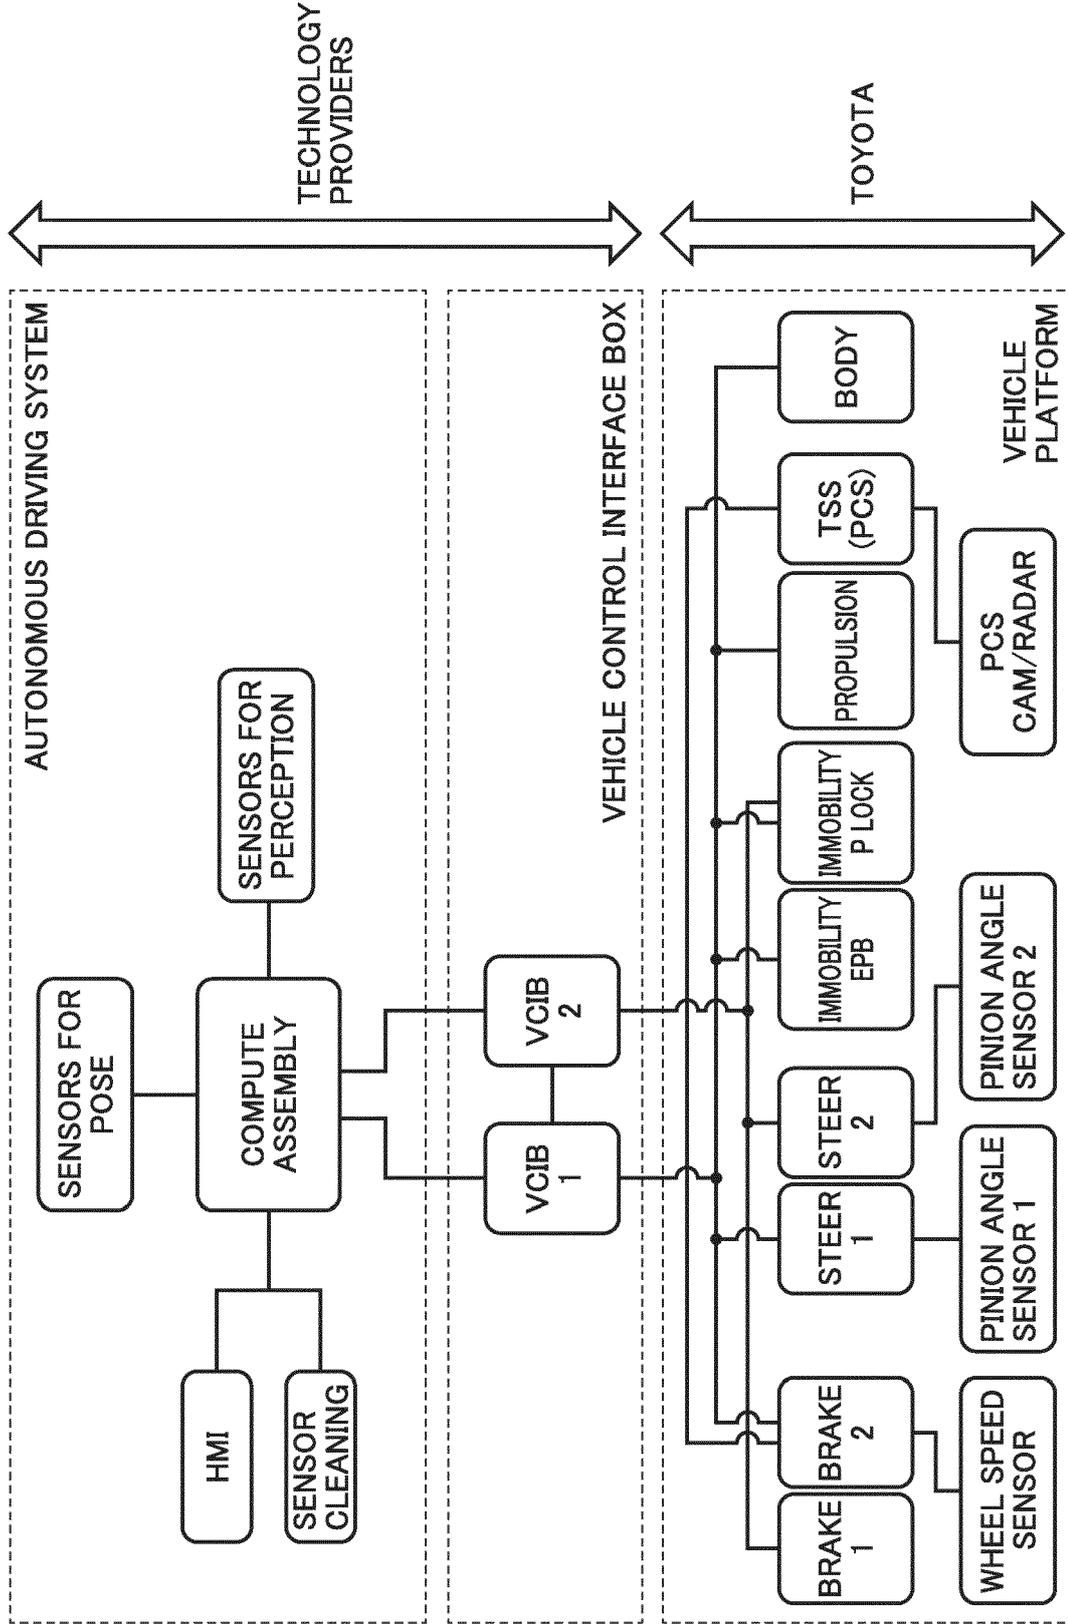


FIG.17

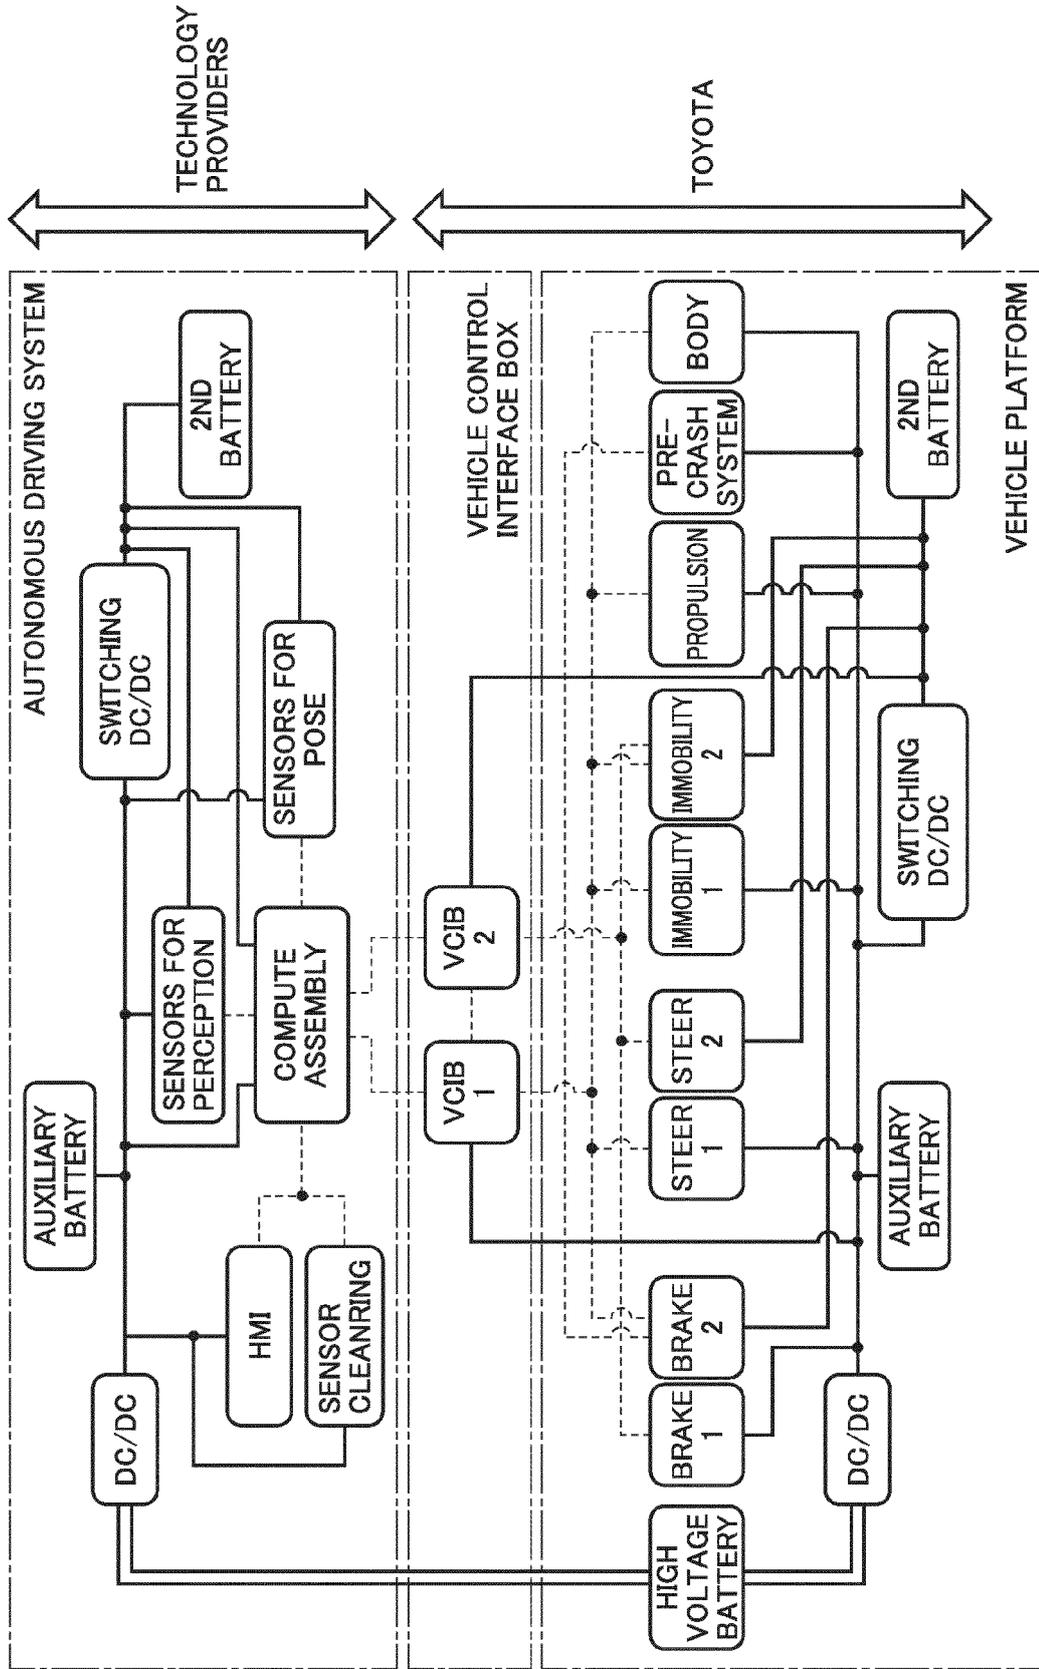


FIG.18


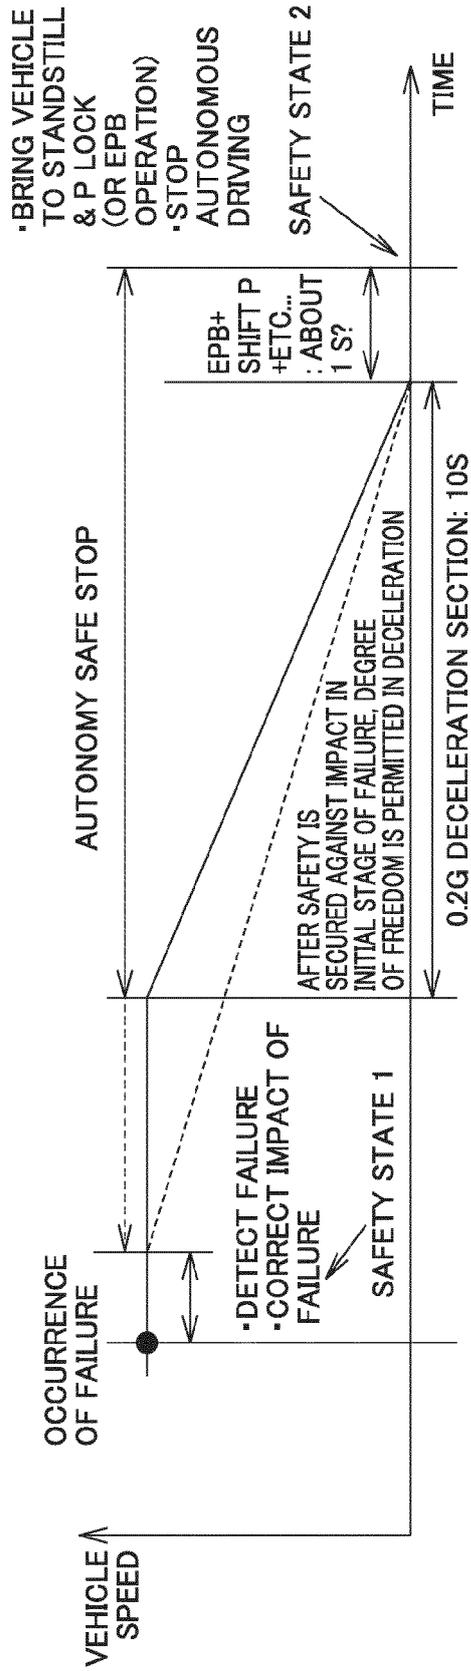


FIG.19



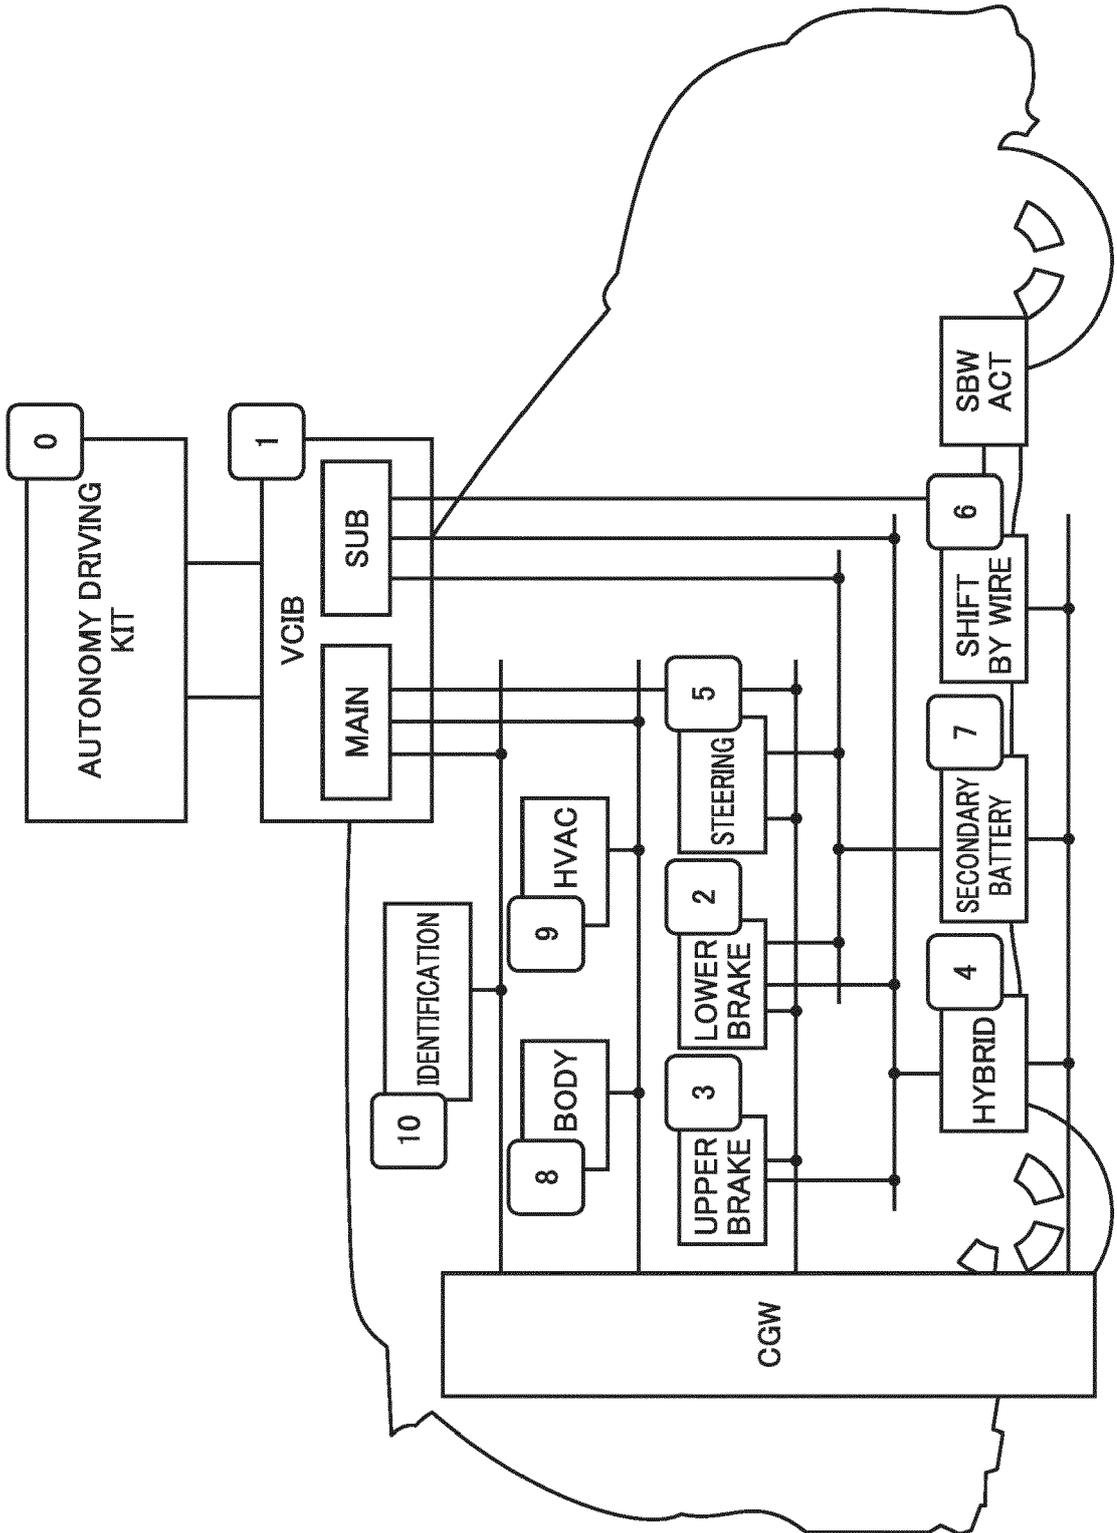

EUROPEAN SEARCH REPORT

Application Number
EP 21 15 4204

5

10

15

20

25

30

35

40

45

50

55

DOCUMENTS CONSIDERED TO BE RELEVANT			
Category	Citation of document with indication, where appropriate, of relevant passages	Relevant to claim	CLASSIFICATION OF THE APPLICATION (IPC)
X	US 8 965 691 B1 (LOMBROZO PETE [US]) 24 February 2015 (2015-02-24)	1,2	INV. B60W40/10 F02D41/26 G01D5/245 G01M17/007 G01P13/04
Y	* column 4, lines 22-29 * * column 4, line 47 - column 5, line 13 * * column 6, lines 24-50 * * column 15, lines 13-22 * * column 18, lines 8-41 * * column 22, lines 30-52; claims; figures * * column 5, lines 27-37 *	1-4	
Y	US 2016/377508 A1 (PERRONE PAUL J [US] ET AL) 29 December 2016 (2016-12-29) * paragraphs [0069] - [0073], [0080], [0081], [0164]; claims; figures *	1,2	
Y	US 2010/185361 A1 (IRTH MARKUS [DE] ET AL) 22 July 2010 (2010-07-22) * paragraphs [0036] - [0038], [0041]; claims; figures *	1,3,4	
Y	EP 1 470 017 A1 (TOYOTA MOTOR CO LTD [JP]) 27 October 2004 (2004-10-27) * paragraphs [0198], [0199]; claims; figures *	2	TECHNICAL FIELDS SEARCHED (IPC) B60W G01P F02D G01M G01D
The present search report has been drawn up for all claims			
Place of search The Hague		Date of completion of the search 14 June 2021	Examiner Ducher, Alban
CATEGORY OF CITED DOCUMENTS X : particularly relevant if taken alone Y : particularly relevant if combined with another document of the same category A : technological background O : non-written disclosure P : intermediate document		T : theory or principle underlying the invention E : earlier patent document, but published on, or after the filing date D : document cited in the application L : document cited for other reasons & : member of the same patent family, corresponding document	

EPO FORM 1503 03.82 (P04C01)

ANNEX TO THE EUROPEAN SEARCH REPORT
ON EUROPEAN PATENT APPLICATION NO.

EP 21 15 4204

5 This annex lists the patent family members relating to the patent documents cited in the above-mentioned European search report.
The members are as contained in the European Patent Office EDP file on
The European Patent Office is in no way liable for these particulars which are merely given for the purpose of information.

14-06-2021

Patent document cited in search report	Publication date	Patent family member(s)	Publication date
US 8965691	B1	24-02-2015	NONE
US 2016377508	A1	29-12-2016	US 2016377508 A1 29-12-2016 US 2020041385 A1 06-02-2020
US 2010185361	A1	22-07-2010	AT 554399 T 15-05-2012 DE 102007030431 A1 02-01-2009 EP 2171480 A1 07-04-2010 US 2010185361 A1 22-07-2010 WO 2009003777 A1 08-01-2009
EP 1470017	A1	27-10-2004	AU 2002366971 A1 30-07-2003 CA 2471841 A1 24-07-2003 CN 1608011 A 20-04-2005 DE 60211380 T2 01-02-2007 EP 1470017 A1 27-10-2004 ES 2259737 T3 16-10-2006 JP 3956693 B2 08-08-2007 JP 2003191774 A 09-07-2003 KR 20040073521 A 19-08-2004 US 2005027402 A1 03-02-2005 WO 03059680 A1 24-07-2003

REFERENCES CITED IN THE DESCRIPTION

This list of references cited by the applicant is for the reader's convenience only. It does not form part of the European patent document. Even though great care has been taken in compiling the references, errors or omissions cannot be excluded and the EPO disclaims all liability in this regard.

Patent documents cited in the description

- JP 2020015721 A [0001]
- JP 2018132015 A [0003]